October 2016 INS 801-654 Rev I

# CROUSE-HINDS SERIES

# ZoneDefender pro range AC panel transient voltage surge suppressor

Adhering to these instructions guarantees maximum performance of this Protection device.

### Introduction

This document explains how to install the ZoneDefender pro range of AC panel surge protective devices.

### Installation Instructions

### Mounting

The suppressor should be mounted as close to the panel and wire connections as possible. The shortest and most direct wire connections will ensure best performance. Use the four mounting holes located on the tabs to secure unit to a solid flat surface. The type of hardware used to mount the ZoneDefender pro will depend on the mounting structure and are not included with the unit.

### **AC Power Connections**

Proper wiring techniques associated with the National Electrical Codes should be followed. The use of a 30 AMP minimum circuit breaker is required in the event the connection wires short or the ZoneDefender pro needs servicing.

This product is NOT designed to be nipple mounted.

When making the connections, cut each conductor as short as possible. Avoid large loops and sharp bends in the wire. Bind all connecting wires tightly together throughout the wire run from the ZoneDefender pro to the panel.

Connect the BLACK wires to the phase conductors,

connect the WHITE wire to the neutral bus and connect the GREEN wire to the ground bus.

### NOTE

Removal of the existing nut from the 3/4" conduit nipple will cause the nipple seal to be broken. Ensure that if this nut is removed and/or replaced by another fitting, it is tightened to ensure the internal gasket maintains the original seal.

# CAUTION


Do not over-tighten and cause wire damage. Failure to ensure the seal of the conduit nipple will not be covered by the warranty.

### NOTE


Incorrect installation will impair the effectiveness of AC panel surge protectors. Particularly important is the length and routing of the connecting leads.




Eaton Electric Limited, Great Martings, Butterfield, Luton Beds, LU2 80L, UK. Tel: + 44 (0)1582 725633 Fax: + 44 (0)1582 422283 E-mail: mtlenquiv@eaton.com www.mtl-inst.com @ 2016 Eaton All Riights Reserved Publication No. INS 801-654 Rev I October 2016 ZoneDefender pro range October 2016

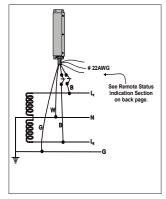

### **Connection diagrams**

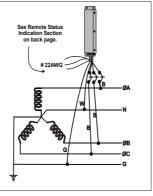

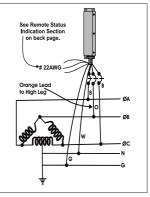

Split phase

Three phase WYE

Three phase high leg delta

NOTE: Circuit breaker (30A - 60A) is MANDATORY.

## The Status Indicator

# NOTE:

All wires must be connected and power applied **before** the led will illuminate.

# **Diagnostic Indication**

The ZoneDefender pro provides a patent pending diagnostic circuitry that monitors connected power and protection status. The following is a description of each indication.

GREEN	(ON)	AC POWER is present and
RED	(OFF)	protection is provided.
		^

GREEN		AC POWER is present but the Zone Defender PRO needs replaced. In
RED	(ON)	addition, an audible alarm will sound and the remote indication will change states.

### **Remote Status Indication**

The ZoneDefender pro provides for remote monitoring via a (normally open) or (normally closed) circuit. The circuit is rated for 3amps maximum at 60W (DC supply) or 120VA (AC supply). The common wire is YELLOW, the normally open wire is BLUE and the normally closed wire is RED.

# Maintenance

At intervals not exceeding two months, check:

- 1. Status indication light
- 2. Conditions of connecting cables

# NOTE:

No customer serviceable parts inside. Opening unit WILL void Warranty. ZoneDefender pro range October 2016

# THIS PAGE IS LEFT INTENTIONALLY BLANK



#### AUSTRALIA

MTL Instruments Pty Ltd, 10 Kent Road, Mascot, New South Wales, 2020, Australia Tel: +61 1300 308 374 Fax: +61 1300 308 463 E-mail: mtlsalesanz@eaton.com

### BeNeLux

MTL Instruments BV Ambacht 6, 5301 KW Zaltbommel The Netherlands

Tel: +31 (0) 418 570290 Fax: +31 (0) 418 541044 E-mail: mtl.benelux@eaton.com

### CHINA

Cooper Electric (Shanghai) Co. Ltd 955 Shengli Road, Heqing Industrial Park Pudong New Area, Shanghai 201201 Tel: +86 21 2899 3817 Fax: +86 21 2899 3992 E-mail: mtl-cn@eaton.com

### FRANCE

MTL Instruments sarl, 7 rue des Rosiéristes, 69410 Champagne au Mont d'Or France

Tel: +33 (0)4 37 46 16 53 Fax: +33 (0)4 37 46 17 20 E-mail: mtlfrance@eaton.com

#### GERMANY MTL Instruments GmbH

Heinrich-Hertz-Str. 12, 50170 Kerpen, Germany Tel: +49 (0)22 73 98 12- 0 Fax: +49 (0)22 73 98 12- 2 00 E-mail: csckerpen@eaton.com

#### INDIA

MTL India, No.36, Nehru Street, Off Old Mahabalipuram Road Sholinganallur, Chennai- 600 119, India Tel: +91 (0) 44 24501660 /24501857 Fax: +91 (0) 44 24501463 E-mail: mtilndisales@eaton.com

#### ITALY

MTL Italia srl, Via San Bovio, 3, 20090 Segrate, Milano, Italy Tel: +39 02 959501 Fax: +39 02 95950759 E-mail: chmninfo@eaton.com

#### JAPAN

Cooper Crouse-Hinds Japan KK, MT Building 3F, 2-7-5 Shiba Daimon, Minato-ku, Tokyo, Japan 105-0012 Tel: +81 (0)3 6430 3128 Fax: +81 (0)3 6430 3129 E-mail: mtl-jp@eaton.com

#### NORWAY

Norex AS Fekjan 7c, Postboks 147, N-1378 Nesbru, Norway Tel: +47 66 77 43 80 Fax: +47 66 84 55 33 E-mail: infr@norex no

#### RUSSIA

Cooper Industries Russia LLC Elektrozavodskaya Str 33 Building 4 Moscow 107076, Russia Tel: +7 (495) 981 3770 Fax: +7 (495) 981 3771 E-mail: mtlrussi@eaton.com

### SINGAPORE

Cooper Crouse-Hinds Pte Ltd No 2 Serangoon North Avenue 5, #06-01 Fu Yu Building Singapore 554911 Tel: +65 6 645 9864 / 5 Fax: +65 6 487 7997 E-mail: sales.mtlsing@eaton.com

### SOUTH KOREA

Cooper Crouse-Hinds Korea 7F. Parkland Building 237-11 Nonhyun-dong Gangnam-gu, Seoul 135-546, South Korea.

Tel: +82 6380 4805 Fax: +82 6380 4839 E-mail: mtl-korea@eaton.com

### UNITED ARAB EMIRATES

Cooper Industries/Eaton Corporation Office 205/206, 2nd Floor SJ Towers, off. Old Airport Road, Abu Dhabi, United Arab Emirates Tel: +971 2 44 66 840 Fax: +971 2 44 66 841

E-mail: mtlgulf@eaton.com

### UNITED KINGDOM

Eaton Electric Limited, Great Marlings, Butterfield, Luton Beds LU2 8DL Tel: +44 (0)1582 723633 Fax: +44 (0)1582 422283 E-mail: mtlenquiry@eaton.com

#### AMERICAS

Cooper Crouse-Hinds MTL Inc. 3413 N. Sam Houston Parkway W. Suite 200, Houston TX 77086, USA Tel: +1 281-571-8065 Fax: +1 281-571-8069 E-mail: mtl-us-info@eaton.com



#### Eaton Electric Limited,

Great Marlings, Butterfield, Luton Beds, LU2 20L, UK Tel: + 44 (0)1582 723633 Fax: + 44 (0)1582 42283 E-mail: mtlenquiry@eaton.com www.mtl-inst.com @ 2016 Eaton All Rights Reserved Publication No. INS 80-654 Rev I 041016 October 2016 EUROPE (EMEA): +44 (0)1582 723633 mtlenquiry@eaton.com

THE AMERICAS: +1 800 835 7075 mtl-us-info@eaton.com

ASIA-PACIFIC: +65 6 645 9888 sales.mtlsing@eaton.com The given data is only intended as a product description and should not be regarded as a legal warranty of properties or guarantee. In the interest of further technical developments, we reserve the right to make design changes.