

# ***WIO-900L***

## ***Wireless I/O***



**User Guide**

**INM WIO900L**



**This page intentionally left blank.**

# Contents

<b>Contents</b>	<b>3</b>
About this document	5
<b>Installing your unit</b>	<b>7</b>
Unit components and connections	8
Transmitter unit	8
Receiver unit	11
Installing the antenna	13
Supported antennas	13
Radio transmission distances	15
Installing and earthing antennas	16
Dipole and collinear antennas	17
Dipole antennas	17
Collinear antennas	17
Yagi antennas	19
Installing the power supply	21
<b>Inputs and outputs</b>	<b>22</b>
Digital inputs	23
Relay outputs	24
Status outputs	25
Analog input	26
Thermocouple input	29
Pulse input	30
Analog output	31
<b>Installing and configuring the unit</b>	<b>33</b>
Installing the unit	34
Configuring your units	35
Testing your units	36
<b>Unit specifications</b>	<b>37</b>
Transmitter unit	37
Receiver unit	37
Ancillary hardware reference information	38
RS232 serial cable	38
<b>Index</b>	<b>39</b>

**This page intentionally left blank.**

**Safety information**

Thank you for selecting the WIO-900L for your telemetry needs. We trust it will give you many years of valuable service. To ensure your WIO-900L enjoys a long life, double-check **ALL** your connections with the *Installation Guide* before powering on the module.

**NOTE: This equipment is suitable for use in Class 1 Division 2 groups A, B, C and D or non-hazardous locations only.**

**WARNING: EXPLOSION HAZARD – Substitution of components may impair suitability for Class I Division 2.**

<b>**IMPORTANT SAFETY INFORMATION**</b>
<p>The WIO-900L must be installed in an enclosure suitable for the surrounding environment. If installed in a Class 1 Div 2 area, the enclosure must comply with current Class 1 Div 2 requirements and entry to it be possible only with the use of a tool.</p>

**WARNING:** Incorrect termination of supply wires may cause internal damage and will void warranty.

Exposure to RF energy is an important safety consideration. The FCC has adopted a safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated equipment as a result of its actions in Docket 93-62 and OET Bulletin 65 Edition 97-01.

**FCC Notice when used in USA: WIO-900L Wireless I/O Module**

Part	Additional information
<b>15</b>	This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part15 of the FCC rules (Code of Federal Regulations 47CFR Part 15). Operation is subject to the condition that this device does not cause harmful interference.
<b>90</b>	This device has been type accepted for operation by the FCC in accordance with Part90 of the FCC rules (47CFR Part 90). See the label on the unit for the specific FCC ID and any other certification designations.

**Industry Canada: WIO-900L Wireless I/O Module**

RSS-119 - This device has been type accepted for operation by Industry Canada in accordance with RSS-119 of the Industry Canada rules. See the label on the unit for the Industry Canada certification number, and any other certification designations.

NOTE: Any changes or modifications not expressly approved by Measurement Technology Limited could void the user's authority to operate this equipment.

To operate this equipment legally the user must obtain a radio-operating license from the appropriate government agency, so that radio users can be coordinated and interference minimised.

**Safety information - FCC Notice**

This device complies with Part 15.247 of the FCC Rules. Operation is subject to the following two conditions:

- > This device may not cause harmful interference; and
- > This device must accept any interference received, including interference that may cause undesired operation

## About this document

This document is the **WIO-900L Wireless I/O Installation Manual** that describes how to install your WIO-900L units and contains important information for installing your units with other equipment.

---

### Note

If your network only contains one transmitter and receiver pair, you should also read the WIO-900L QuickStart Guides.

---

This document contains the following sections:

Section	Read this section if you want to ...
<b>Basic steps for using your unit</b>	Learn the basic steps for installing and using your unit.
<b>Factory default configuration</b>	Understand how the transmitter sends information to the receiver.
<b>Unit components</b>	Understand the different parts of your unit.
<b>Antenna installation</b>	Learn how to install an antenna with your unit.
<b>Resetting factory defaults</b>	Reset your unit to the original factory default settings.
<b>Linking transmitter and receiver units</b>	Link your units to work as a dedicated pair.
<b>Safety information</b>	Understand important safety information related to your unit. <b>NOTE:</b> You must read this information before installing your unit.
<b>Specifications</b>	Know technical information about your unit.

For more information, see the next sections.

---

## Installing your unit

---

This section describes how to install your unit and contains the following sections:

Step	Description	For more information, see ...
<b>1 – Read the safety information</b>	Lets you understand important safety information related to your unit. <b>NOTE:</b> You must read this information before installing your unit.	Safety information on page 5.
<b>2 – Get to know the unit features</b>	Understand the basic features of your unit.	Unit components and connections on page 8.
<b>3 – Install the antenna</b>	Learn how to install an antenna with your unit.	Installing the antenna on page 13.
<b>4 – Install the power supply</b>	Learn how to install a power supply for your unit.	Installing the power supply on page 21.
<b>5 – Install the units</b>	Learn how to install your unit.	Installing the unit on page 34.
<b>6 – Linking and configuring the unit</b>	Learn how to link and configure your units to transmit and receive information.	Configuring your units on page 35.
<b>7 – Test the unit</b>	Understand the principles for testing your units.	Testing your units on page 36.

### Note

To ensure internal surge protection works correctly, you must earth each unit using the Earth terminal.

---


For more information, see the next sections.

## Unit components and connections

This section shows the components and terminal connections for the transmitter and receiver units.


### Transmitter unit

The WIO-900LT transmitter unit has the following components and terminal connections:

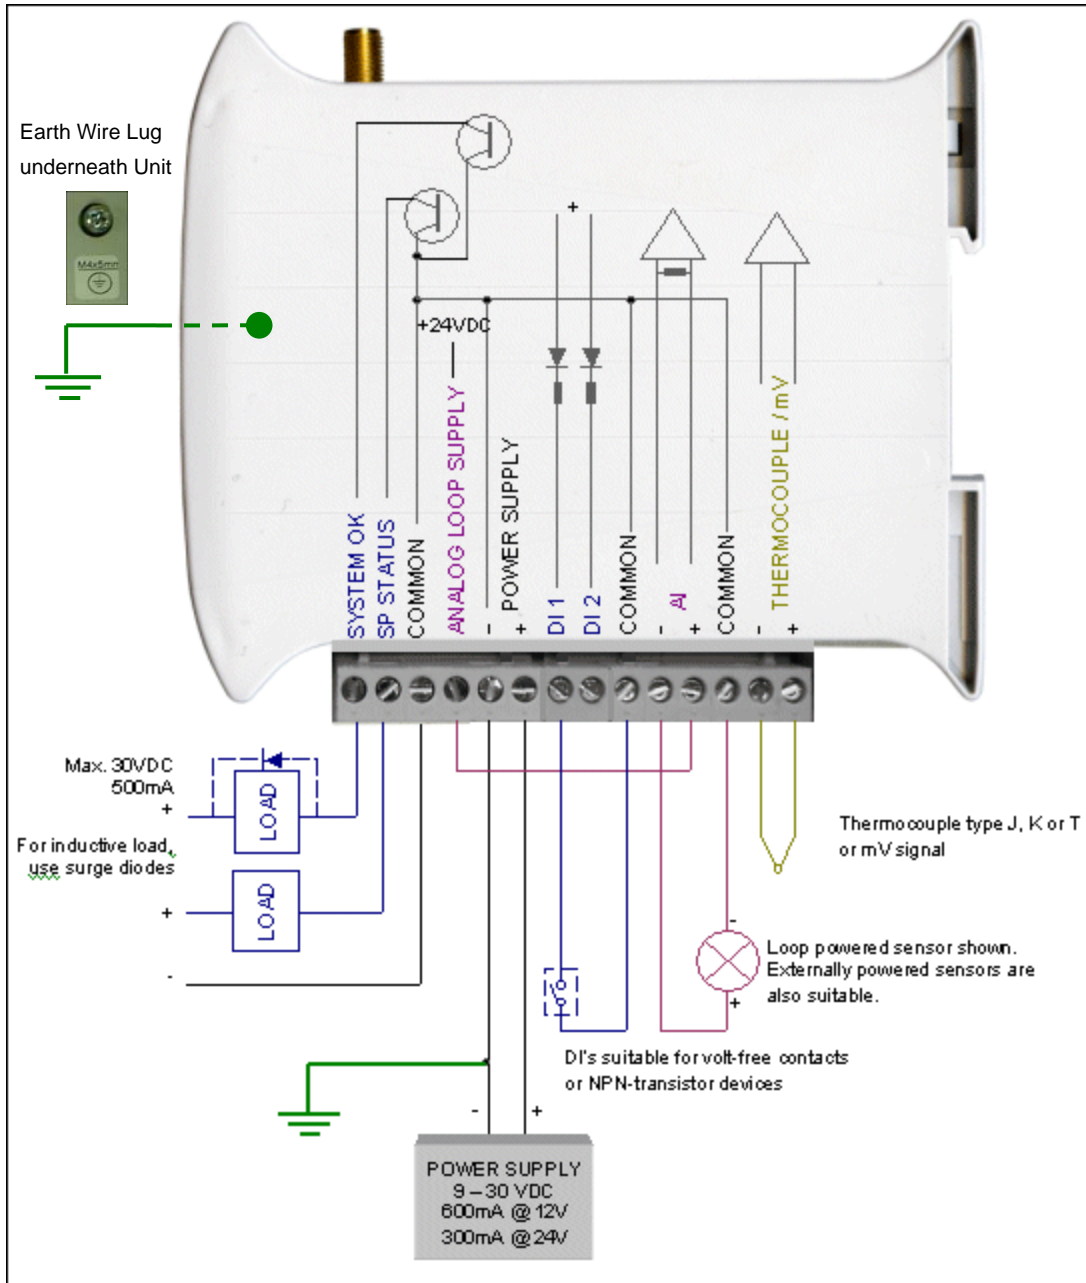




The front panel contains the following components:

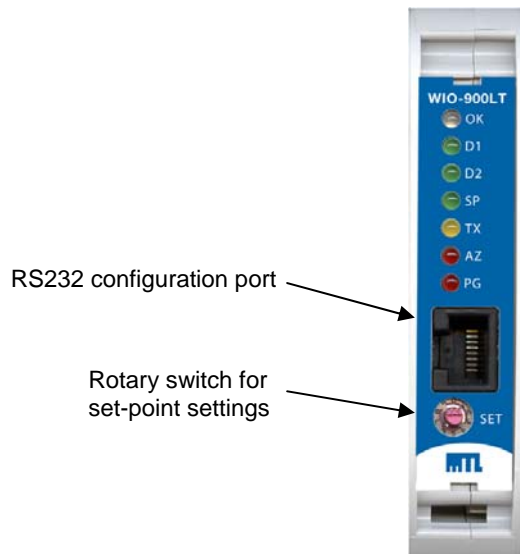

The triangle on the rotary switch indicates the current position, for example:

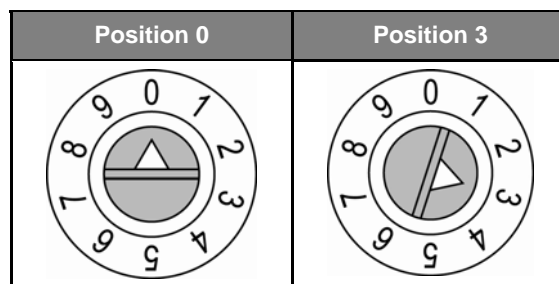


**NOTE:** To avoid damaging the rotary switch, use a screwdriver to change the position. The rotary switch controls the setpoint levels on the Analog and Thermocouple inputs.

The LEDs on the front panel indicate the unit status:


LED Status	Indicates	
None	No power supply.	
OK LED Green	Current status of the unit OK.	
OK LED Red	Fault condition detected in unit.	
TX Led Flashes	Transmitting Message.	
PG LED on	Configuration Cable Connected.	
Input LED ON	Input LEDs (i.e. D1, D2, SP, AZ.) light when the corresponding input is active.	
	D1	Digital Input 1 is active (Low).
	D2	Digital Input 2 is active.
	SP	Analog Setpoint is active.
	AZ	Analog Input is zero mA
All LEDs medium flash	Medium speed flash (1.6HZ) indicates the module is halfway through the configuration process. Medium flash also happens when you set the rotary switch to position 0 when powering on the unit.	

## Receiver unit

Your WIO-900L-R unit has the following components and terminal connections:

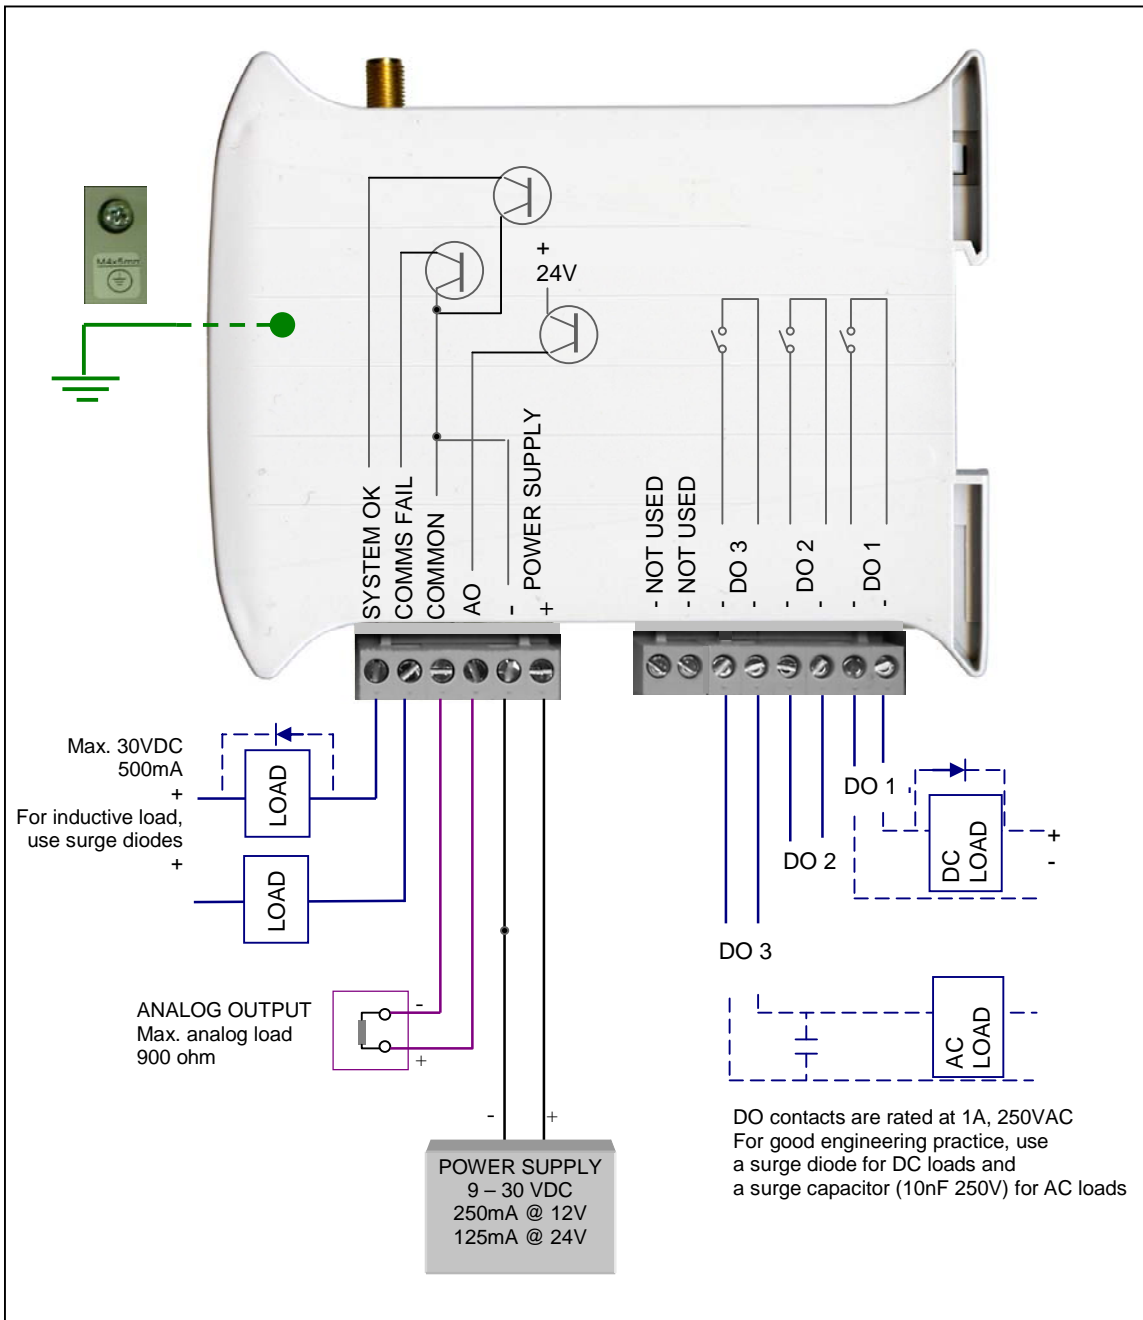

The front panel contains the following components:

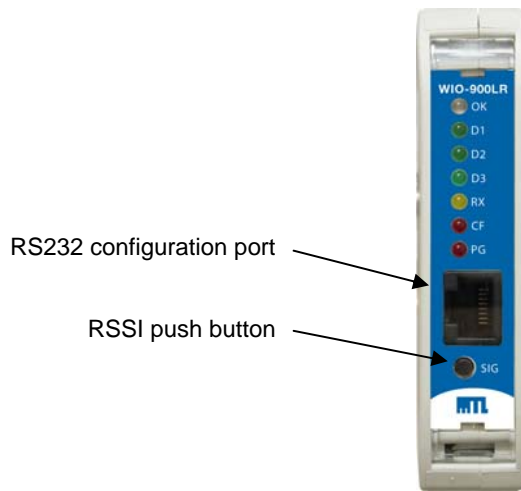

The LEDs on the front panel indicate the unit status:

LED Status	Indicates			
<b>None</b>	No power supply.			
<b>OK LED Green</b>	Current status of the unit OK.			
<b>OK LED Red</b>	Fault condition detected in unit.			
<b>RX Led Flashes</b>	Receiving Message.			
<b>CF Led ON</b>	Module Communication Failure Output is active.			
<b>PG LED on</b>	Configuration Cable Connected.			
<b>Output LED ON</b>	The Output LEDs (i.e. D1, D2, D3) light when the corresponding output is active.			
	D1	Relay output D1 is ON (Contact Closed).		
	D2	Relay Output D2 is ON.		
	D3	Relay Output D3 is ON.		
<b>LEDs with RSSI Push Button Pressed</b>	When you press the RSSI push button, the unit shows the signal strength by lighting the LEDs from the bottom to the top. Signal strength is the strength of the last message received that was addressed to this station.			
	LED	Signal Strength	LED	Signal Strength
	D1	More than -85 dBm	RX	More than -100 dBm
	D2	More than -90 dBm	CF	More than -105 dBm
	D3	More than -95 dBm	PG	Always on during RSSI test
<b>Output LED flashing quickly</b>	If an output is in communication failure, the corresponding LED flashes at 5 Hz.			
	D1	Relay Output D1 is in communication failure.		
	D2	Relay Output D2 is in communication failure.		
	D3	Relay Output D3 is in communication failure.		
	PG	Analog output is in communications failure.		

## Installing the antenna

This section explains how to install your antenna and contains the following sections:

Section	Description	For more information, see ...
<b>Supported antennas and cables</b>	Details the antennas and cables you can use with the units.	Supported antennas on page 13.
<b>Radio transmission distances</b>	Details the distances for reliable operation.	Radio transmission distances on page 15.
<b>Installing and earthing antennas</b>	Details important information about installing and earthing antennas.	Installing and earthing antennas on page 16
<b>Dipole and collinear antennas</b>	Details important information about using dipole and collinear antennas.	Dipole and collinear antennas on page 17.
<b>Yagi antennas</b>	Details important information about using Yagi antennas.	Yagi antennas on page 19.

For more information, see the next sections.

### *Supported antennas*

You can use the following antennas with the units:

Antenna	Additional information	Total gain (including cable)
<b>ANTWH900-SMA</b>	Whip antenna for mounting directly onto the module - operation up to ½ mile (1 km).	-6 dBi
<b>ANTCFD890EL</b>	0 dBi Dipole antenna with 15' of Cellfoil cable and SMA connector.	0 dBi
<b>ANTSG900EL</b>	5dBi Collinear omni-directional antenna with N-type connector.	5 dBi
<b>ANTSG900-6</b>	8dBi Collinear omni-directional antenna with N-type connector.	8 dBi
<b>ANTYU6-900</b>	10dBi Yagi directional antenna with N-type connector.	10 dBi
<b>ANTYU16-900</b>	15dBi Yagi directional antenna with N-type connector.	15 dBi

You can use the following cables with the units:

The following table shows compatible cables for different antennas when used with the WIO-900LT:

Antenna	North America	Australia/NZ
<b>ANTSG900EL</b>	Any cable.	CC10-SMA or CC20-SMA.
<b>ANTSG900-6</b>	Any cable.	CC20-SMA.
<b>ANTYU6-900</b>	CC20-SMA.	External cable with loss > 9dB.
<b>ANTYU16-900</b>	External cable with loss > 9dB.	External cable with loss > 15 dB

You must carefully select antennas for WIO-900LT modules to avoid contravening the maximum power limit on the unlicensed channel. The net gain of the antenna/cable configuration should be no more than 6dB in North America (USA, Canada, Mexico) and no more than 0 dB in Australia / New Zealand.

---

**Note**

---

The net gain of an antenna/cable configuration is the gain of the antenna (in dBi) less the loss in the coaxial cable (in dB).

For example, an ANTSG900-6 antenna with a CC20-SMA cable has a net gain of 2dB (i.e. +8 dB – 6 dB) at 900 MHz.

---

The WIO-900LR module has no limitation on antenna gain, as this module does not incorporate a radio transmitter.

The following table details the gains of some typical antennas:

Antenna	Gain (dBi)
Dipole with integral 3m cable	0
Dipole without cable	2
5dBi Collinear (3dBd)	5
8dBi Collinear (6dBd)	8
3 element Yagi	5
6 element Yagi	10

The following table details losses for typical cables:

Cable	Loss (dB per 10m) at 900 MHz
RG58	-5
RG213	-2.5
Cellfoil	-3

## Radio transmission distances

The unit will operate reliably over large distances depending on the:

- **Antenna type;**
- **Antenna location;**
- **Amount of radio interference;** and
- **Radio path obstructions** (e.g. hills or trees).

Typical reliable distances are:

Area	Distance	Additional information
<b>USA/Canada</b>	20+ miles	6dB net gain antenna configuration permitted (4W Equivalent RF power permitted).
<b>Australia/NZ</b>	20+ km	Unity gain antenna configuration (1W Equivalent RF power permitted).

To achieve these distance, you must elevate at least one site on a hill or transmission tower.

Modules will operate reliably with some radio path obstruction; however obstructions also reduce the reliable distance.

### Note

You must test all obstructed paths to check the reliability of the path.

You can achieve maximum transmission distances if the radio path has “line of sight”. For example, raising antennas above intermediate obstructions including hills, trees, etc. Obstructions reduce the range; however they may not prevent a reliable path.

The closer the obstruction is to the antenna, the greater the blocking effect. For example, a group of trees around the antenna is a larger obstruction than a group of trees further away from the antenna. You can achieve longer distances by mounting one antenna on top of a hill.

### Note

Due to the earth’s curvature, you must elevate antennas higher than the ground level between the antennas for longer paths (greater than 3 miles / 5 km).

The unit can tolerate larger amounts of obstructions for shorter distances. For very short distances, you can also mount the antennas inside buildings.

## Installing and earthing antennas

You must connect an antenna to each WIO-900L module using the SMA connector at the top of the enclosure.

MTL recommends carefully taping the connections between the antenna and coaxial cable to prevent moisture ingress. Moisture ingress in the coaxial cable is a common cause of radio system problem as it greatly increases the radio losses.

MTL recommends taping the connection with three layers of tape:

Layer	Tape
1	PVC tape.
2	Vulcanising tape (e.g. 3M 23 tape).
3	Additional layer of PVC UV-stabilized insulating tape.

The first tape layer lets you easily inspect the joint if required as you can easily remove the vulcanising seal.

---

### Note

You must effectively earth all masts for mast-mounted antennas to avoid lightning surges. We also recommend using a coaxial surge diverter for antennas mounted outside industrial plant environments.

---

If the antenna is not already shielded from lightning strike by an adjacent earthed structure, you can provide shielding by installing a lightning rod above the antenna.

You should connect the antenna to the module using 50 ohm coaxial cable (e.g. RG58 or RG213) terminated with a male coaxial connector. The higher the antenna is mounted, the greater the transmission range; however as the length of coaxial cable increases so do cable losses. For use on unlicensed frequency channels, there are several types of antenna suitable for use.

If you mount antennas on elevated masts, you should effectively earth the masts to avoid lightning surges. The WIO-900L radios are fitted with surge protection.

---

### Note

For high lightning risk areas, MTL recommends additional surge suppression devices. If the antenna is not already shielded from lightning strike by an adjacent earthed structure, you can install a lightning rod to provide shielding.

---



## *Dipole and collinear antennas*

This section contains important information for using dipole and collinear antennas. For more information, see the next sections.

### Dipole antennas

Unity gain dipole antennas are commonly used on unlicensed channels. The dipole antenna does not provide any gain, so the power transmitted from the antenna is the same as the power out of the module.

A dipole antenna that comes supplied with integral 15 ft cable does not require additional coaxial cable.

You should mount dipole antennas vertically, preferably no less than 1 metre away from a wall or mast for maximum performance.

### Collinear antennas

Collinear antennas transmit the same amount of radio power in all directions horizontally, and are easy to install and use. They provide gain by compressing the radiated signal to a flattened disc shape, and reducing the amount of signal radiated above and below the horizontal plane.

Collinear antennas are generally used at a central site with more than one remote site, or at a repeater site.


Collinear antennas are similar in appearance to dipole antennas; however the antenna is longer.

Collinear antennas are supplied without cable, and require additional coaxial cable.

You can use collinear antennas to:

- **Transmitter** – to compensate for the losses in long lengths of coaxial cable.
- **Receiver** – to increase receive sensitivity.

The following diagram shows the recommended installation for collinear and dipole antennas:

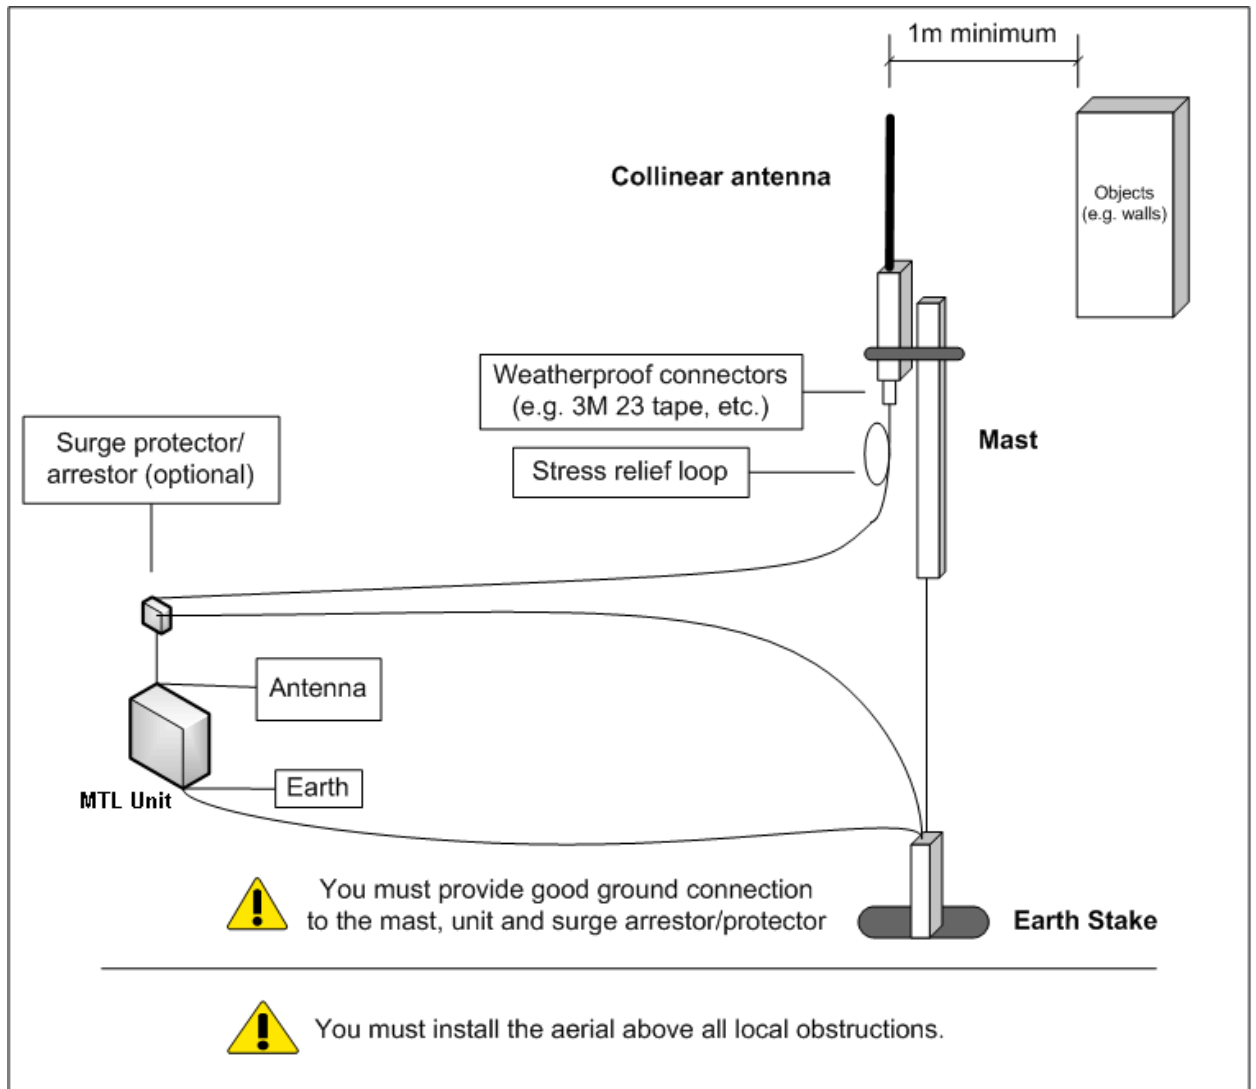

## Yagi antennas

Yagi antennas are directional and have positive gain to the front of the antenna and negative gain in other directions. You can use the gain to:

- **Compensate for coaxial cable loss for transmitter unit;** and
- **Increase receive sensitivity for receiver units.**

You should install Yagi antennas with the central beam horizontal and pointed directly in the transmission direction to benefit from the antenna gain.

### Note

Yagi antennas usually have a drain hole on the folded element. You should position the drain hole at the bottom when installing the antenna.


You can install Yagi antennas:

- **Vertically polarized** – with the elements in a vertical plane; or
- **Horizontally polarized** – with the elements in a horizontal plane.

The following table shows the recommended installation mode for different situations.

If your installation has ...	MTL recommends using ...
<b>Two stations both using Yagi antennas</b>	Horizontal polarization for the stations.
<b>Two or more stations communicating with a common station</b>	Vertical polarization for the stations; and Dipole or collinear (i.e. non-directional) antenna for the central station.

The following diagram shows the recommended installation for collinear and dipole antennas:

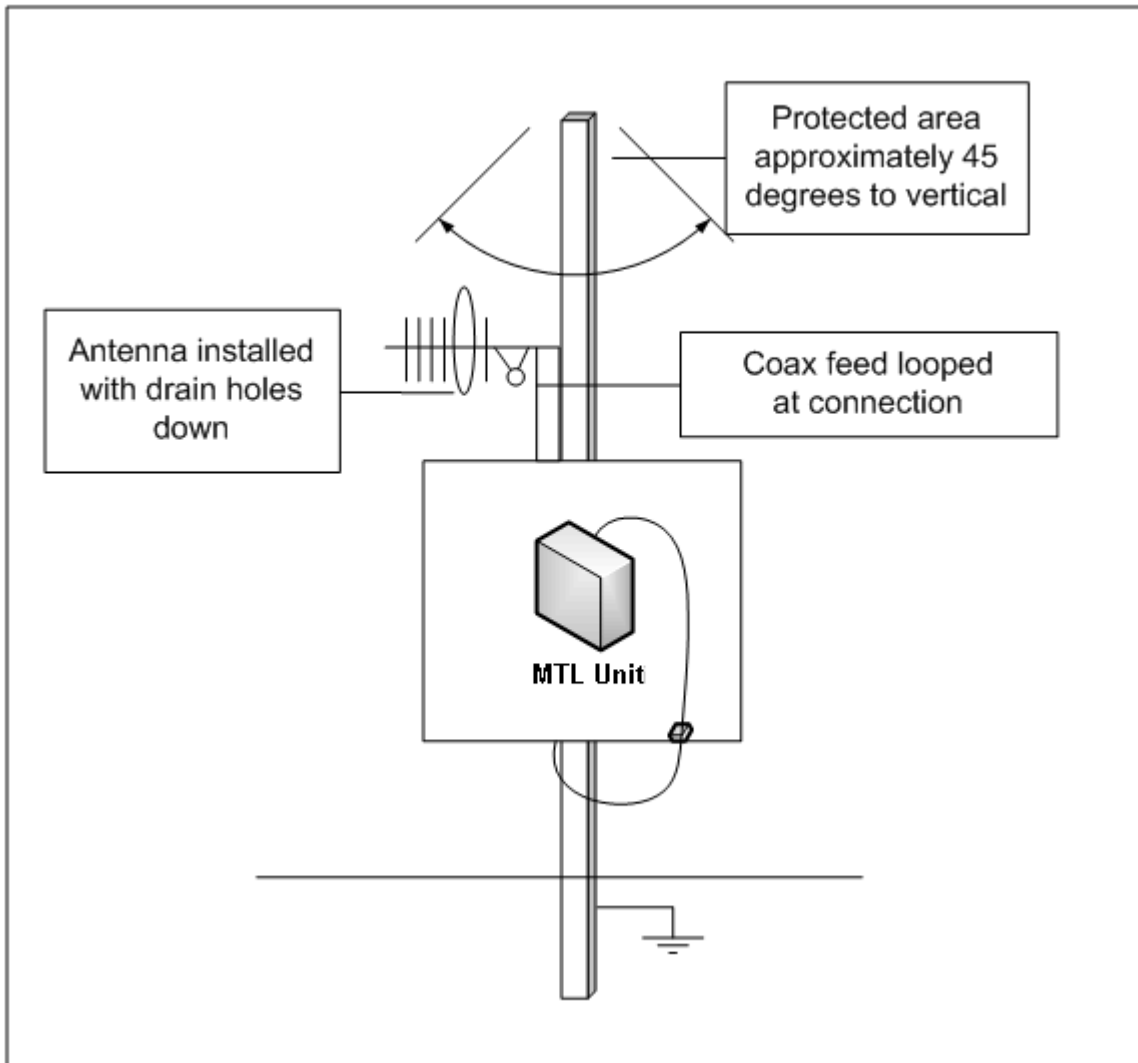

## Installing the power supply

The unit works with a 9-30 VDC 0.6 Amp CSA certified Class 2 power supply. For use in Class 1 Div 2 hazardous areas, the power supply must be approved for Class 1 Div 2 use.

### Warning – explosion hazard

Do not connect or disconnect the power supply while the circuit is live, unless the area is known to be non-hazardous.

The following table shows the power supply requirements :

Power supply	WIO-900LT	WIO-900L-R
12V	600 mA	250 mA
24V	300 mA	125 mA

The power supply can be a floating supply or negatively grounded.

The transmitter provides a 24V DC regulated supply for analog loop power. The supply is rated at 35 mA and should ONLY be used for powering analog loops.

To install the power supply:

1. Connect the positive lead to **Power Supply Input**.
2. Connect the negative lead to **Ground**.


### Note

To ensure internal surge protection works correctly, you must earth each unit using the Earth terminal.

You should connect the module to the same ground/earth point as the antenna mounting to avoid differences in earth potential during voltage surges.

Do NOT connect the positive side of the supply to Earth.

3. The following diagram illustrates the connection:

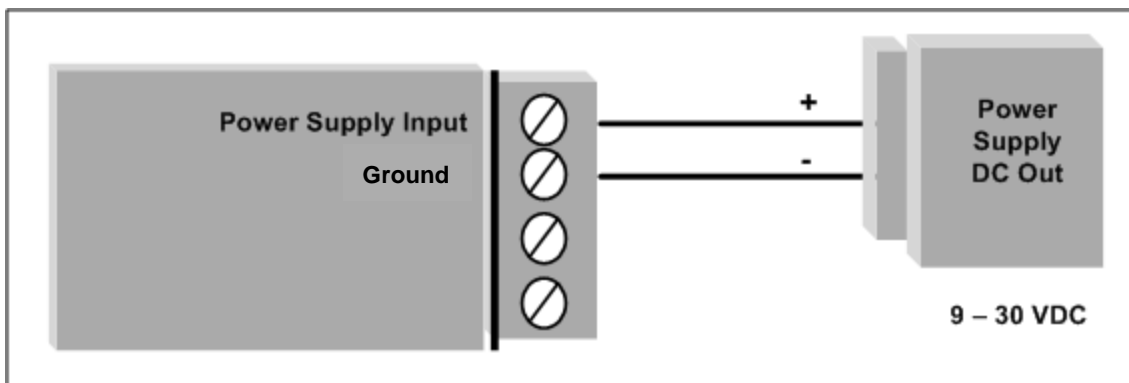

## Inputs and outputs

The units have the following inputs and outputs:

Input/output	WIO-900LT	WIO-900LR	Description	For more information, see ...
<b>Digital inputs</b>	2		Suitable for Voltage free contact, NPN transistor, 0-5V signal.	Digital inputs on page 23.
<b>Relay outputs</b>		3	250VAC 1A / 30VDC 1A.	Relay outputs Important Information on page 24.
<b>Status outputs</b>	2	2	Max 30VDC, 500 mA. Indicate module status, communication failure and local setpoint status.	Status outputs on page 25.
<b>Analog inputs</b>	1		4-20 mA with over-range and under-range. 0-10 mA with over-range.	Analog input on page 26.
<b>+24V Loop supply</b>	1		Provides power for 1 external current loop (up to 35 mA).	Installing the power supply on page 21.
<b>Analogue setpoint</b>	1		Allows discrete setpoint to be controlled from analog input. Threshold adjustable via rotary switch.	Refer to the <b>User Manual</b> .
<b>Thermocouple / millivolt input</b>	1		Provides measurement of E, J, K, T type Thermocouple, millivolt signals and user-defined thermocouple types.	Thermocouple input on page 29
<b>Thermocouple setpoint</b>	1		Lets you control discrete setpoint from thermocouple with threshold adjustable via rotary switch.	Refer to the <b>User Manual</b> .
<b>Pulse inputs</b>	2		Up to 10Hz.	Pulse input on page 30.
<b>Analog output</b>		1	0-22 mA, suitable for loop powered, floating input or single-ended input device.	Analog output on page 31.

For more information, see the next sections.

## Digital inputs

The WIO-900LT module provides two digital inputs suitable for:

- **Voltage free contacts** – e.g. mechanical switches; or
- **NPN transistor devices** – e.g. electronic proximity switches; or
- **0-5V signals** - 2V – 4V Minimum range.

### Note


PNP transistor devices are not suitable.

The unit provides contact wetting current of approximately 5mA to maintain reliable operation of driving relays.

Each digital input is connected between the appropriate **Digital Input** terminal and **Ground**.

Each digital input circuit includes a LED indicator that lights when the digital input is active (i.e. when the input circuit is closed).

To activate the digital input, the switching device resistance must be less than 200 ohms.

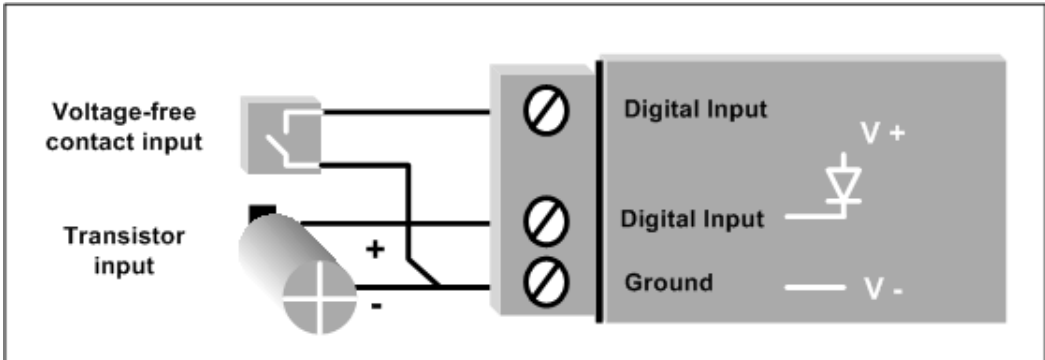Connection method	Example
Voltage free contact	
Active 0-5v signal device	


## Relay outputs

The WIO-900LR module provides three normally open voltage-free relay contacts rated at 250VAC / 30VDC 1A. **If installed in a hazardous area it is important to ensure that incendive levels are adhered to.**


You can use these outputs to directly control low-powered equipment or power larger relays for higher-powered equipment.

For inductive loads, MTL recommends:

**DC relays** - use flyback diodes across the external circuit to prevent arcing across the relay contacts.

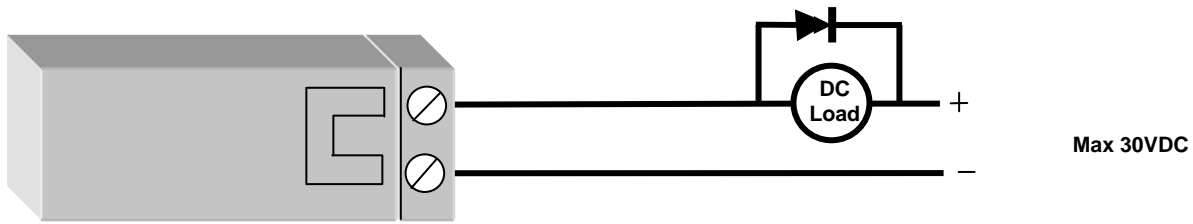

**AC relays** – use capacitors (e.g. 10nF 250V) to prevent arcing across the relay contacts.

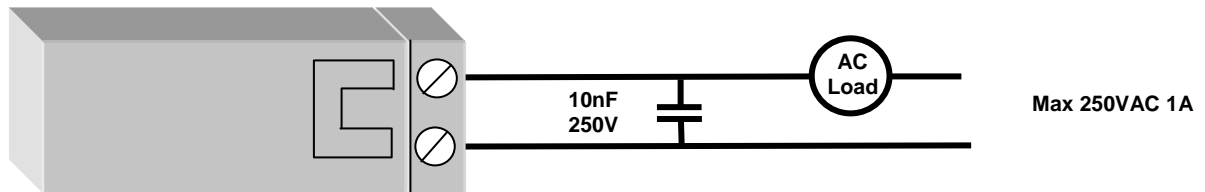

You can individually configure digital outputs to turn off if no command message is received by the output for a certain period. This feature provides an intelligent watchdog for each output, so communications failure at a transmitting site causes the output to revert to a known state.

The output circuit is connected to the appropriate pair of **Digital Output** terminals. Each digital output circuit includes a LED indicator that lights when the digital output is active. The LED flashes if the watchdog alarm is active.

### **IMPORTANT SAFETY INFORMATION**

In order to comply with Electrical Safety Standards, when connecting SELV **AND** voltages which are greater than SELV (30VAC or 60VDC) together, then Relay Output 2 must **NOT** be used in order to provide sufficient isolation between the outputs




## Status outputs

The unit contains the following status outputs:

- **System OK;**
- **Setpoint Output;** and
- **Communications Failure.**

Status outputs are FET output to common rated at 30VDC 500 mA.

Connect the output circuit to the appropriate Status **Output** terminal. Each status output circuit is associated with an LED indicator that lights lit when the digital output is active.

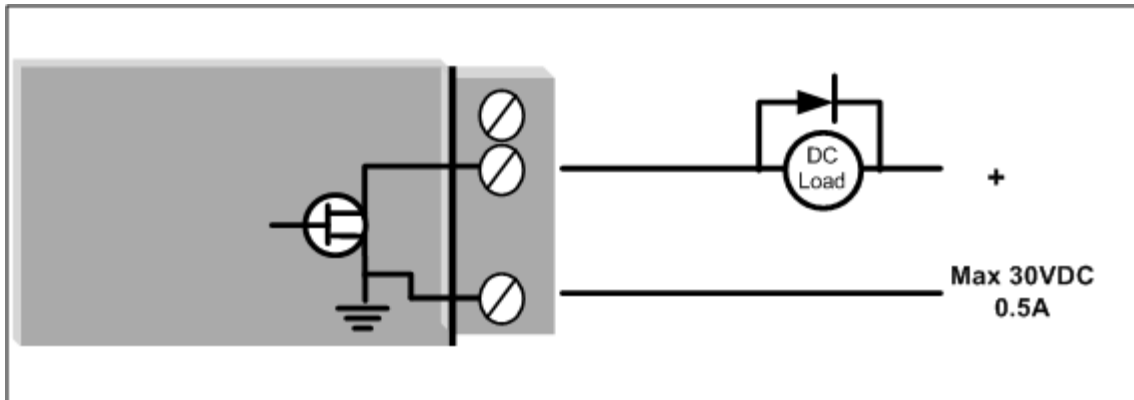

The following table details the status output behavior:

Status output	LED	LED status	Description
<b>System OK active (both modules)</b>	OK	Green	No fault detected
<b>System OK inactive</b>	OK	Red	Internal fault detected. Supply voltage Low Analog Loop supply overloaded
<b>Setpoint Output (WIO-900LT)</b>	SP	Green	Local setpoint attached to 4-20mA analog input.
<b>Communications Failure (WIO-900LR)</b>	CF	Red	Watchdog alarms active on digital outputs or analog outputs.

## Analog input

The WIO-900LT module provides one 0 - 20 mA DC analog input for connecting to instrument transducers (e.g. level, moisture, pressure transducers, etc.).

---

### Note

The WIO-900LT module inputs measure down to 0mA and can also be used for zero based signals (e.g. 0 - 10 mA).

---

The analog input has a positive and negative terminal and can be placed at any point in the current loop, providing neither input rises above the 24 volt **Analog Loop Supply** level.

Each input has a loop resistance of less than 250 ohms and zener diode protection is provided against over-voltage and reverse voltage.

---

### Note

You may require additional protection in high voltage or noisy environments or for long wiring runs.

---

A 24VDC loop supply is available on the WIO-900LT module for powering the analog transducer loops. In this situation, connect the:

- **Analog loop** - between an **Analog Input (-)** terminal and **Ground**.
- **Positive terminal** – i.e. **Analog Input (+)** to the +24V **Analog Loop Supply**.

Externally powered loops may be connected by connecting the input between "Analog Input (+)" and "Analog Input (-)" Common mode voltage may be -0.5V to 27V.

MTL recommends using shielded cable for analog I/O loops to minimize induced noise and Radio Frequency Interference (RFI).

---




### Note


You should only connect one end of the cable shield to Earth

---

To connect an analog signal from a PLC or DCS output to an analog input on the WIO-900LT, you must carefully check the internal circuit of the output as different devices use different ways to create an analog signal.

The following diagrams illustrate different connection methods:

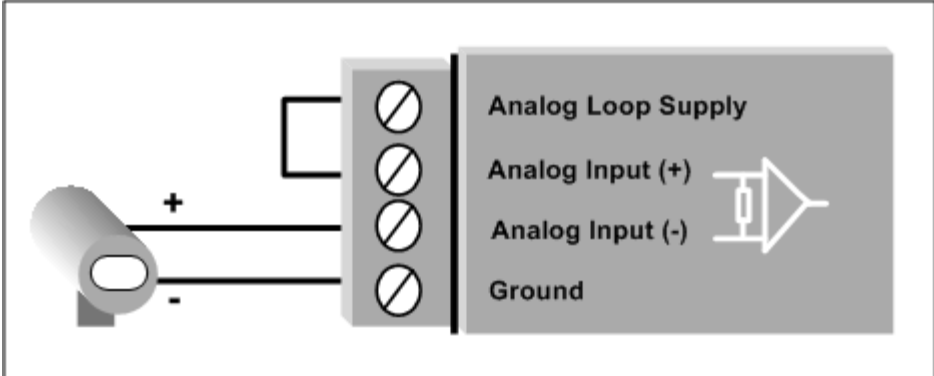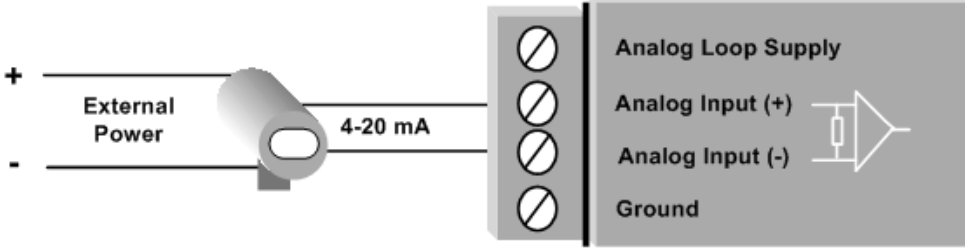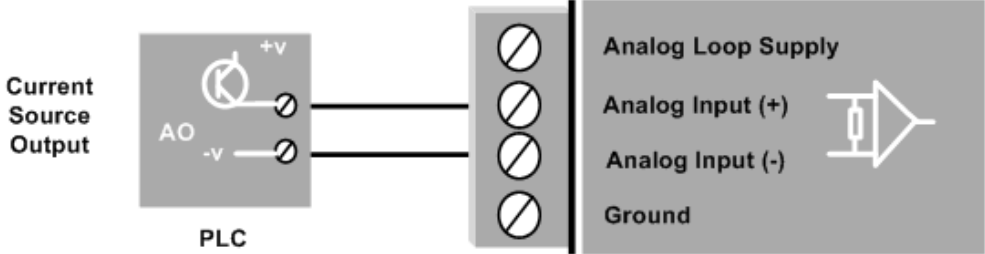Analog signal source	Example
2 wire transducer	
4 wire transducer	 <p data-bbox="427 1088 1326 1218"><b>Note</b> Analog input must be within 27V of Ground. If your terminal voltage exceeds this, you must use a loop isolator.</p>
Current source output	 <p data-bbox="427 1659 1449 1854"><b>Note</b> 1. Analog input must be within 27V of Ground. If your terminal voltage exceeds this, you must use a loop isolator. 2. Ground is connected to ground/earth. If you cannot ground the PLC COM, you must use a loop isolator.</p>

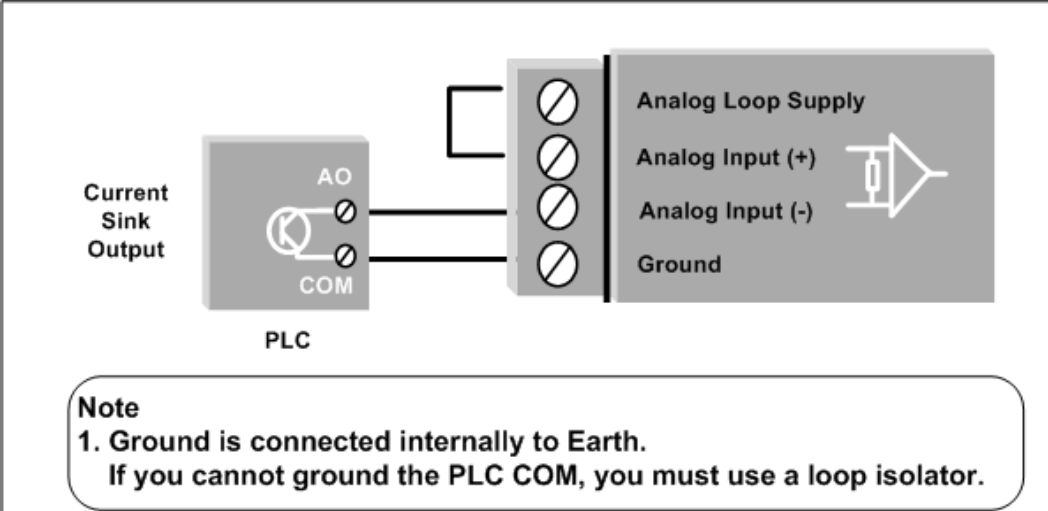
Analog signal source	Example
Current sink output	 <p data-bbox="403 309 1455 817"><b>Note</b> 1. Ground is connected internally to Earth. If you cannot ground the PLC COM, you must use a loop isolator.</p>

## Thermocouple input

The WIO-900LT provides one input suitable for connection to a thermocouple or a millivolt level signal. The module provides linearization tables for J, K and T type thermocouples and also supports other types via a user linearization table.

Millivolt signals in the range -10mV to +100 mV are supported.

For more information on configuring the thermocouple input and cold-junction compensation to suit your application, refer to the **User Manual**.


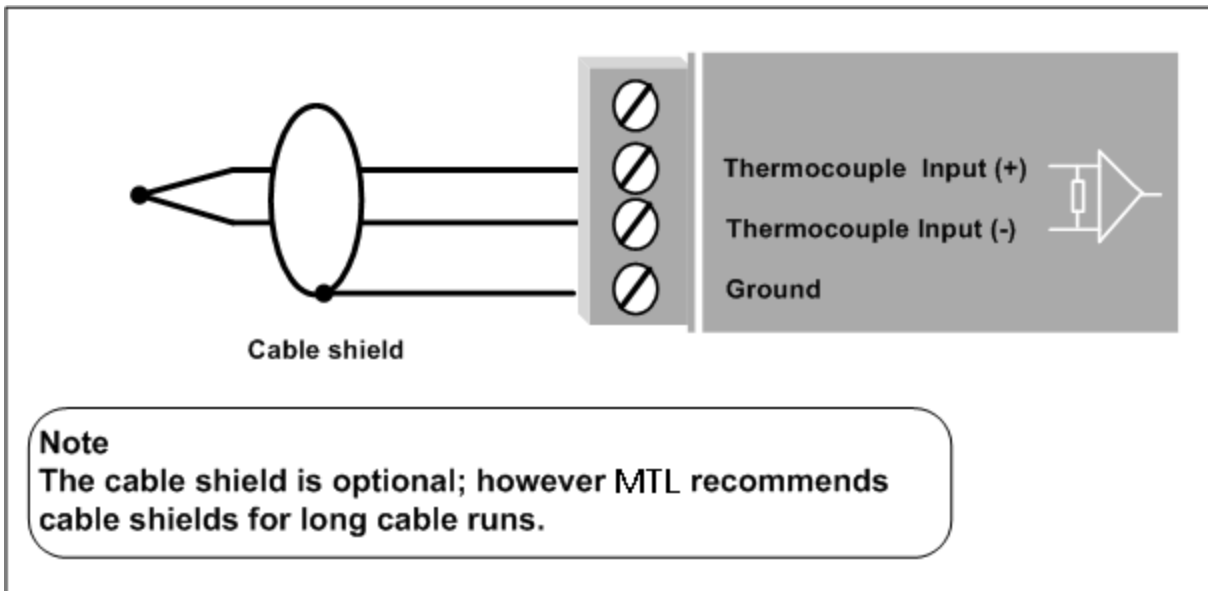


## Pulse input

The WIO-900LT module lets you configure the digital inputs as pulse inputs with the following characteristics:

Characteristic	Value
Maximum rate	10 Hz
Minimum off time	20 mSec
Minimum on time	20 mSec

The following diagrams illustrate different connection methods:

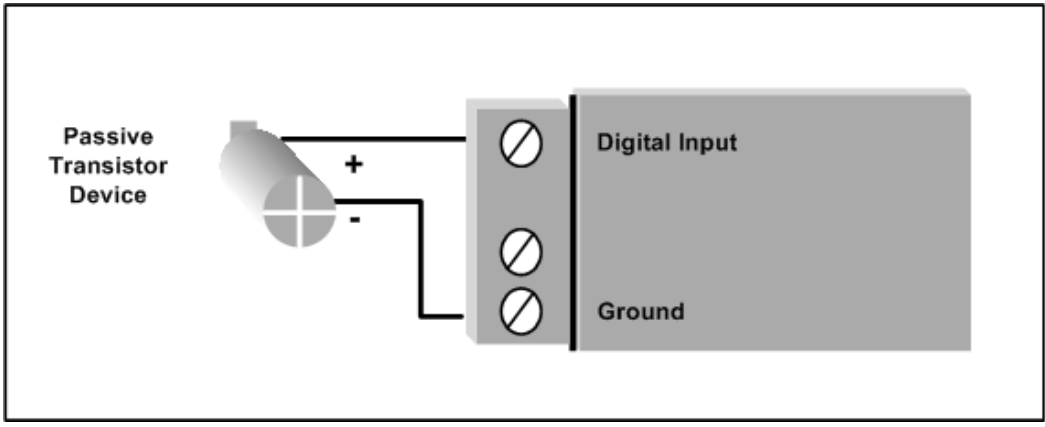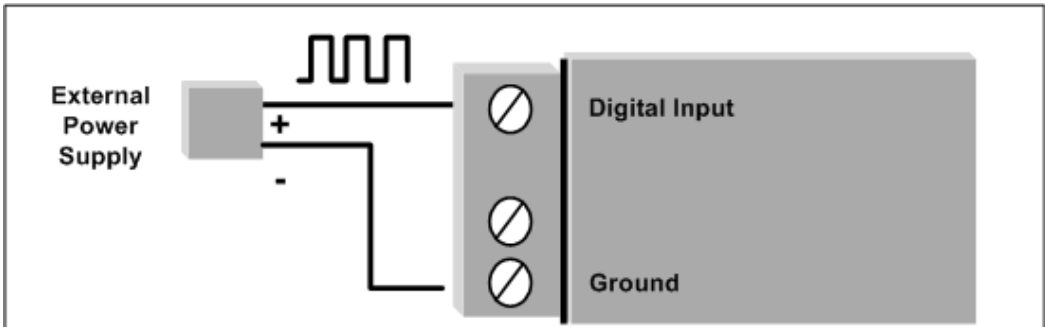Connection method	Example
Passive transistor	 <p>The diagram shows a 'Passive Transistor Device' with a '+' terminal and a '-' terminal. The '+' terminal is connected to a terminal on the module labeled 'Digital Input'. The '-' terminal is connected to a terminal on the module labeled 'Ground'. The module has three terminals in total, with the top one being 'Digital Input' and the bottom two being 'Ground'.</p>
Active pulse device	 <p>The diagram shows an 'External Power Supply' with a '+' terminal and a '-' terminal. The '+' terminal is connected to a terminal on the module labeled 'Digital Input'. The '-' terminal is connected to a terminal on the module labeled 'Ground'. A square wave pulse waveform is shown above the connection to the 'Digital Input' terminal. The module has three terminals in total, with the top one being 'Digital Input' and the bottom two being 'Ground'.</p> <div style="border: 1px solid black; border-radius: 15px; padding: 10px; margin-top: 10px;"> <p><b>Note</b> Use a solid state relay if the voltage range is not suitable. Voltage Range is low: 2V (max); high: 4V (min).</p> </div>

## Analog output

The WIO-900LR module provides a 4 - 20 mA DC analog output for connecting to instrument indicators to display remote analog measurements. The analog output is a current source provided from an internally generated +24V loop supply.



When connecting to an external device (e.g. electronic indicator, recorder, PLC / DCS input, etc.) by connecting the output between the **Analog Output** terminal (+) and the **COM** terminal (-).


### Note

Zener protection of analog outputs provides protection against short periods of over-voltage; however longer periods may result in module damage.

You can also individually configure analog outputs to turn off (i.e. 0 mA) if no command message is received to the output for a certain period.

The following diagrams illustrate different connection methods:

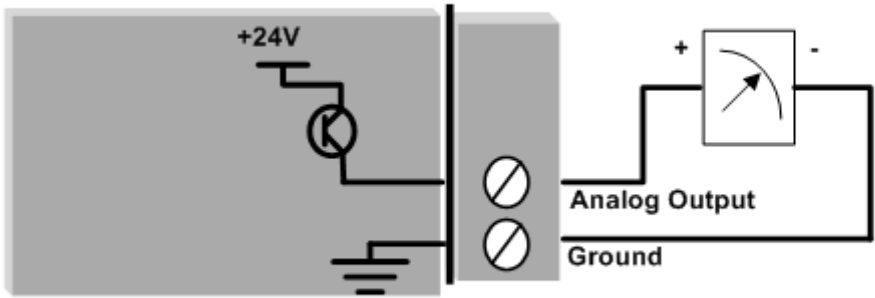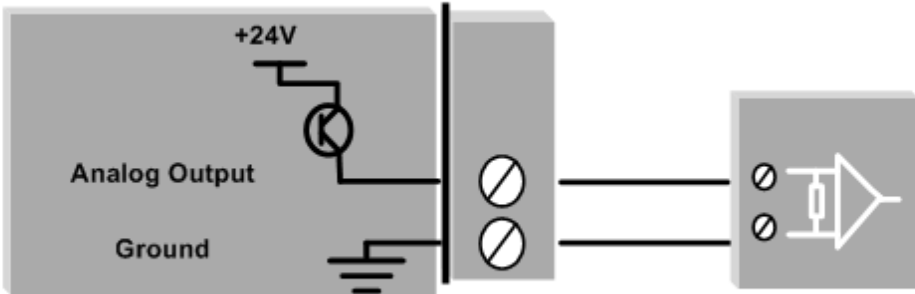Connection method	Example
<p><b>Loop powered device</b></p>	
<p><b>Floating input device</b></p>	

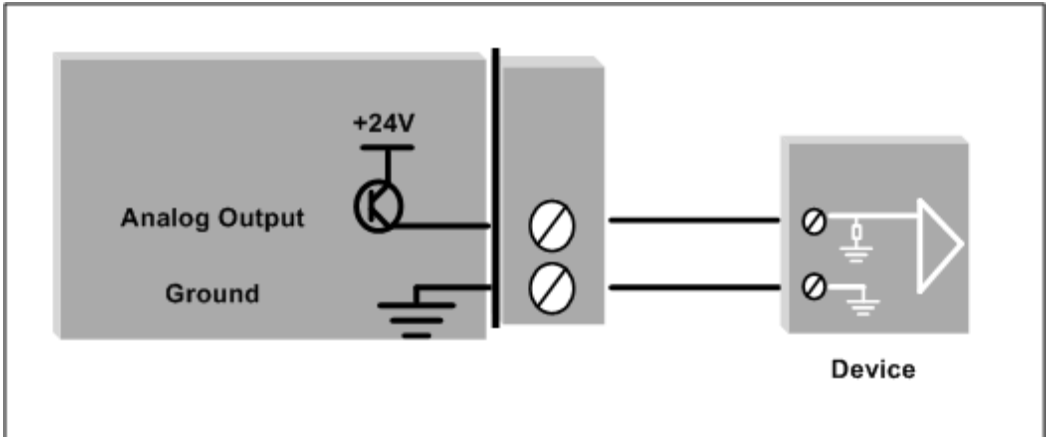Connection method	Example
To single-ended input device	 <p>The diagram illustrates a connection between an Analog Output module and a single-ended input device. On the left, the Analog Output module is shown with a +24V supply and a Ground connection. The output signal line is connected to the top terminal of the Device, which also has a Ground connection. The bottom terminal of the Device is connected to the Ground of the Analog Output module.</p>



## **Installing and configuring the unit**

---

This section describes how to install and configure your unit and contains the following sections:


<b>Section</b>	<b>Description</b>	<b>For more information, see ...</b>
<b>Installing the unit</b>	Describes how to physically install your unit.	Installing the unit on page 34.
<b>Configuring your unit</b>	Describes the different ways to configure your unit.	Configuring your units on page 35.
<b>Testing your unit</b>	Describes MTL's recommendations for testing your unit.	Testing your units on page 36.

For more information, see the next sections.

## Installing the unit

To install the unit:

1. Connect signals to the supplied terminals.
2. Connect the radio antenna.
3. Install DIN rail to mount the module.
4. Clip the module to the DIN rail:

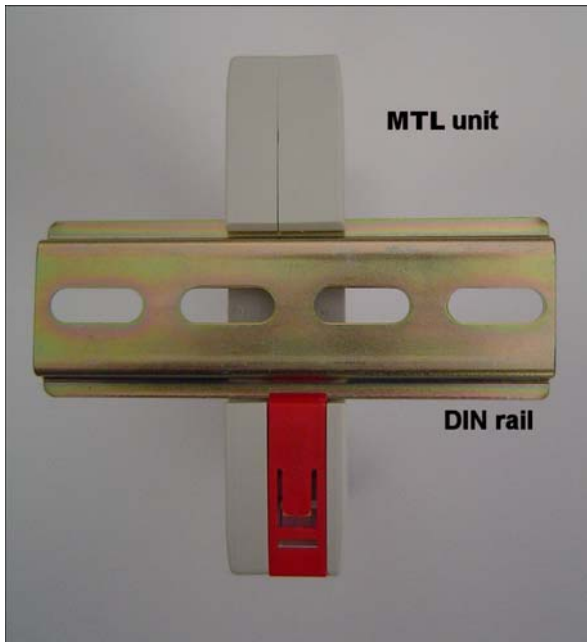

You can now configure your unit. For more information, Configuring your units on page 35.

## Configuring your units

You can configure your network using:

- **Default factory configuration** – enables easy setup your network as a simple send/receive; or
- **User-defined customized configuration** – enables the setting specific information about your network.

For more information on setting a user-defined customised configuration, see the **User Manual**.

For more information on setting the factory default configuration, refer to the **Quick Start Guide** included with your module.

The following table details the factory default configuration:

Signals sent over radio		
WIO-900LT(Transmitter)	Sends	WIO-900L-R (Receiver)
Digital Input 1	⇒	Digital Output 1
Digital Input 2	⇒	Digital Output 2
Analog Setpoint	⇒	Digital Output 3
Analog input (4-20 mA)	⇒	Analog output

Other signals	
WIO-900LT(Transmitter)	WIO-900LR (Receiver)
Thermocouple Input (Not used)	<b>Communication Failure</b> (Comes on if no messages from WIO-900LT)
Setpoint Output (Local indication)	
System OK (On if system OK)	<b>System OK</b> (On if system OK)

## Testing your units

We recommend you bench test the complete system before installing a new system.

Configuration problems are easier to identify and fix when the units are next to each other.

The following table describes common problems and recommended solutions:

If your installation has ...	You should check ...	MTL recommends ...
<b>Poor radio channel communications</b> TX LED flashes but no RX LED Output LEDs flash quickly	The antenna installation. For radio interference on the same channel. The radio path is adequate.	Higher performance antennas if the path is too long. Higher mounting points to overcome obstructions. Using an intermediate unit as a repeater.
<b>Red OK LED</b>	Power Supply voltage	Supply should be between 9 and 30VDC.
	Analog loop supply current	The analog loop supply is rated for 35 mA max.
	Module configuration	Your module configuration may be invalid. Re-load or restore factory default configuration.
<b>TX LED flashes but no RX LED (bench testing)</b>	Ensure the WIO-900L-R is set to the same country and frequency band as the WIO-900LT	Register the receiver with the transmitter. (Refer to the <b>Quick Start Guide</b> )
<b>RX LED Flashes but no outputs change</b>	For a user-defined customized configuration, - check the configuration.	Check the configuration and re-program the modules.
	For default configuration, check the receiver is registered with the transmitter.	Repeat the procedure to register the receiver with the transmitter.

For support for other testing issues, please contact MTL.

## Unit specifications

This section details the specifications for each unit.

### Transmitter unit

Input/output	Number	Additional information
Digital inputs	2	Dry-contact digital inputs slow-pulsed at 10Hz. All inputs are suitable for voltage free contacts (e.g. mechanical switches) or NPN transistor devices (e.g. electronic proximity switches). <b>NOTE:</b> PNP transistor device inputs are NOT suitable.
Status outputs	2	Separate System OK and Setpoint Status
Analog inputs	1	0-20mA differential input; 16-bit resolution, 0.1% accuracy, 10 ohm input impedance.
Thermocouple inputs	1	J, K or T type thermocouple with on-board cold-junction compensation. Cold junction compensation accuracy $\pm 1^\circ$ over ambient temp range: $-40^\circ$ to $+60^\circ\text{C}$ .
Power supply	1	9-30 VDC 0.6 Amp CSA certified Class 2 power supply. For use in Class 1 Div 2 hazardous areas, the power supply must be approved for Class 1 Div 2 use. <b>WARNING:</b> Explosion hazard - do not connect or disconnect while circuit is live unless area is known to be non-hazardous.
Transmitter	1	1-Watt Frequency Hopping Spread Spectrum (FHSS) Transmitter.
Frequency	902-928 MHz	Actual frequency range depends on country.

### Receiver unit

Input/output	Number	Additional information
Digital outputs	3	Voltage-free contacts rated at 250 VAC, 1A, 30VDC 1A 2 for digital inputs and 1 for setpoint.
Status outputs	2	Separate System OK and communication failure output.
Analog output	1	16-bit resolution, 0.1% accuracy, single-ended source output.
Power supply	1	9-30 VDC 0.25 Amp CSA certified Class 2 power supply. For use in Class 1 Div 2 hazardous areas, the power supply must be approved for Class 1 Div 2 use. <b>WARNING:</b> Explosion hazard - do not connect or disconnect while circuit is live unless area is known to be non-hazardous.
Radio receiver	1	High sensitivity FHSS UHF radio receiver.
Frequency	902 – 928 MHz	Actual frequency range depends on country.
Sensitivity	-110 dBm	At PER 8%.

## Ancillary hardware reference information

This section contains reference information about additional hardware components you may need for your unit.

### RS232 serial cable

You can connect the unit to a PC using an RS-232 serial cable to:

- **Transfer configuration information;**
- **Perform factory and field-testing.**

The serial port is an 8 pin RJ-45 plug that communicates using standard RS-232 signals:


Signal information	Value
<b>Baud rate</b>	9600
<b>Bits</b>	8 bits with 1 stop bit
<b>Parity</b>	No parity

MTL supplies a green configuration cable wired to the following pin-out:

#### Note

The following pin-out information is for reference only.

RJ-45	Required	Signal name	Normal colour	DB9
1		Ring Indicator	Green / White	9
2		Data Carrier Detect	Green	1
3	Y	Data Terminal Ready	Orange / White	4
4	Y	Signal Common	Blue	5
5	Y	Receive Data (from Modem)	Blue / White	2
6	Y	Transmit Data (to Modem)	Orange	3
7		Clear to Send	Brown / White	8
8		Request to Send	Brown	7

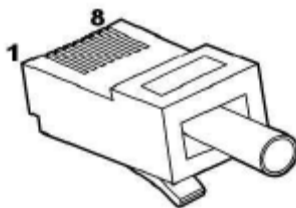

## Index

2 wire transducer.....	27	internal surge protection .....	21
4 wire transducer .....	27	LEDs	
AC relays.....	24	receiver .....	12
active pulse device.....	<i>See</i>	transmitter .....	10
active signal device .....	23	lightening rod .....	16
analog input.....	26	lightening strike.....	16
analog output .....	31	line of sight .....	15
ANTCFD890EL .....	13	linearization tables .....	29
antennas .....	17	loop powered device.....	31
compatible cables .....	13	maximum transmission distance.....	15
dipole .....	17	mechanical switches.....	23
installing.....	15	millivolt signal .....	29
polarization .....	19	net gain.....	14
supported antennas .....	13	obstructions .....	15
ANTSG900-6.....	13	intermediate .....	15
ANTSG900EL .....	13	over-voltage.....	26
ANTWH900 .....	13	passive transistor.....	30
ANTYU16/900 .....	13	pin-out.....	38
ANTYU6/900 .....	13	PLC .....	26
arcing .....	24	polarization .....	19
bench testing.....	36	polarized.....	19
cable		power supply .....	21
loss .....	14	installing .....	21
cables		problems.....	36
for antennas.....	13	pulse input .....	30
supported cables .....	13	PVC tape .....	16
coaxial surge diverter .....	16	Radio Frequency Interference .....	26
configuration		receiver	
default factory .....	35	components.....	11
user-defined customized.....	35	front panel .....	12
configuring.....	35	LEDs .....	12
connections		terminal connections .....	11
taping.....	16	relay outputs .....	24
current sink output.....	28	reliable path.....	15
current source output .....	27	reverse voltage .....	26
DC relays .....	24	RFI.....	26
DCS .....	26	RJ-45 .....	38
digital inputs .....	23	rotary switch .....	9
DIN rail .....	34	changing position .....	9
dipole antennas.....	17	setpoint levels .....	9
electronic proximity switches.....	23	RS-232 .....	38
floating input device .....	31	serial cable .....	38
flyback diodes .....	24	setpoint	
gain		thermocouple .....	22
net gain.....	14	setpoint levels.....	9
hazardous areas .....	21	shielding .....	16
horizontal polarization .....	19	signals .....	35
installing .....	34	single-ended input device .....	32
instrument transducers.....	26	SMA connector .....	16
interference .....	15	solutions .....	36

specifications.....	37	transducers.....	26
status outputs.....	25	transmitter	
surge diverter .....	16	components.....	8
surge protection .....	16	front panel .....	9
surge suppression.....	16	terminal connections .....	8
switches		UV-stabilized tape .....	16
electronic proximity .....	23	vertical polarization.....	19
switches		voltage free contact .....	23
mechanical.....	23	vulcanising tape.....	16
taping connections .....	16	watchdog alarm .....	24
testing .....	36	zener diode protection .....	26
thermocouple .....	29	zero based signals.....	26
thermocouple setpoint.....	22		



**This page intentionally left blank.**

**This page intentionally left blank.**

**This page intentionally left blank.**

**MTL Instruments Pty Limited**

9 /12 Billabong Street  
Stafford  
Queensland 4053  
Australia  
Tel: + 61 1300 308 374 Fax: + 61 1300 308 463  
E-mail: enquiries@mtlaus.com.au

**Cooper Electric (Shanghai) Co. Ltd.**

Room 2001, China Life Tower  
16 Chao Yang Men Wai Street  
Chao Yang District, Beijing  
China 100020  
Tel: + 86 10 5980 0288 Fax: + 86 10 8562 5725  
E-mail: bjsales@mtl-inst.cn

**MTL Instruments sarl**

Les Carrés du Parc  
10 rue des Rosiéristes  
69410 Champagne au Mont d'Or  
France  
Tel: +33 (0)4 78 64 98 32 Fax: +33 (0)4 78 35 79 41  
E-mail: info@mtl-inst.fr

**MTL Instruments GmbH**

An der Gumpgesbrücke 17  
D-41564 Kaarst  
Germany  
Tel: +49 (0)2131 718930 Fax: +49 (0)2131 7189333  
E-mail: info@mtl.de

**MTL India**

No. 36, Nehru Street  
Off Old Mahabalipuram Road  
Sholinganallur  
Chennai - 600 119  
India  
Tel: + 91 (0)44 24501660/24501857 Fax: + 91 (0)44 24501463  
E-mail: sales@mtlindia.com

**MTL Italia srl**

Via Cantù 11  
I - 20092 Cinisello Balsamo MI  
Italy  
Tel: +39 (0)2 61802011 Fax: +39 (0)2 61294560  
E-mail: info@mtl-inst.it

**Cooper Crouse-Hinds Japan KK**

MT Building 3F  
2-7-5 Shiba Daimon  
Minato-ku Tokyo  
Japan 105-0012  
Tel: +81 (0)3 6430 3128 Fax: +81 (0)3 6430 3129  
E-mail: sales@mtlkk.co.jp

**Cooper Crouse-Hinds Korea**

12F, Vision Tower  
707-2 Yeoksam-dong, Gangnam-gu  
Seoul 135-080  
South Korea  
Tel: +82 2 3484 6795 Fax: +82 2 3484 6778

**MTL Instruments BV**

MTL Instruments BV  
Terheijdensweg 465  
4825BK Breda  
The Netherlands  
Tel: +31 (0)76 7505360 Fax: +31 (0)76 7505370  
E-mail: info@mtlbenelux.com

**Cooper Crouse-Hinds Pte Ltd.**

No.2 Serangoon North Avenue 5  
#06-01 Fu Yu Building  
Singapore 554911  
Tel: +65 6 487 7887 Fax: +65 6 487 7997  
E-mail: sales@mtlsing.com.sg

**MTL Instruments**

Villa No. 4, Sector 2-17, Street 6  
PO Box 53234,  
Abu Dhabi, UAE  
Tel: +971 2 446 6840 Fax: +971 2 446 6841  
E-mail: mtlgulf@mtl-inst.com

**Measurement Technology Limited**

Great Marlings, Butterfield, Luton, Beds  
England LU2 8DL  
Tel: +44 (0)1582 723633 Fax: +44 (0)1582 422283  
E-mail: enquiry@mtl-inst.com

**Cooper Crouse-Hinds MTL Inc**

3413 N. Sam Houston Parkway W.  
Suite 210  
Houston TX 77086  
USA  
Tel: +1 281 571 8065 Fax: +1 281 571 8069  
E-mail: csinfo@mtl-inst.com

