


MTL9461-ET

Ethernet Gateway

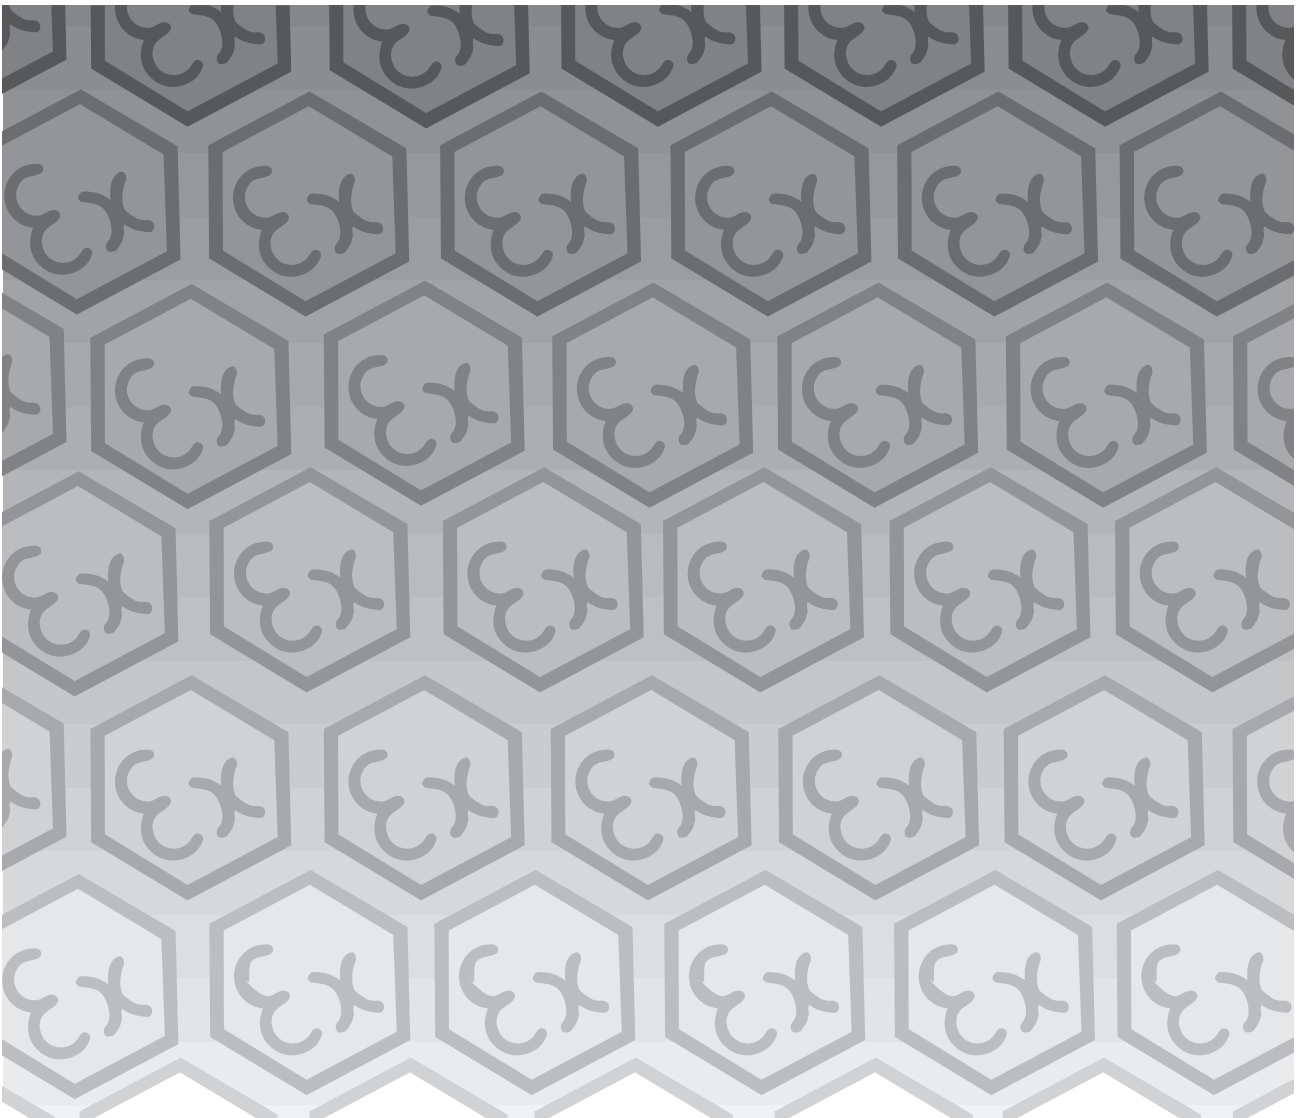

DECLARATION OF CONFORMITY

A printed version of the Declaration of Conformity has been provided separately within the original shipment of goods. However, you can find a copy of the latest version at <http://www.mtl-inst.com/certificates>

CONTENTS

| | | |
|-----------|---|-----------|
| | DECLARATION OF CONFORMITY | II |
| 1 | FEATURES | 1 |
| 2 | DESCRIPTION | 2 |
| 3 | INSTALLATION | 2 |
| 3.1 | Protection | 2 |
| 3.2 | Mechanical mounting | 2 |
| 3.3 | Electrical connections | 3 |
| 4 | SOFTWARE INTRODUCTION | 5 |
| 4.1 | Changing network settings | 5 |
| 4.2 | Setting the operating mode | 6 |
| 5 | REAL PORT MODE | 8 |
| 5.1 | Installing Real Port software | 8 |
| 5.2 | Confirming port registration | 8 |
| 6 | CONFIGURING REAL PORT | 9 |
| 7 | RS485 COMMUNICATIONS | 10 |
| 8 | RS422 COMMUNICATIONS | 10 |
| 9 | MODBUS GATEWAY MODE | 11 |
| 10 | UPDATING THE SOFTWARE ON THE 9461-ET | 12 |
| 11 | ENVIRONMENTAL | 13 |
| 12 | WASTE REMOVAL INFORMATION | 13 |
| 13 | ACCESSORIES | 14 |
| 14 | APPROVALS | 14 |
| 15 | FM CERTIFICATION INFORMATION | 15 |
| 16 | ATEX & IECEx CERTIFICATION INFORMATION | 15 |

THIS PAGE IS LEFT INTENTIONALLY BLANK

9461-ET - Ethernet Gateway



1 FEATURES

- ◆ Intrinsically Safe ATEX / IECEx certified, FM / FMC approved
- ◆ Ga Ex ia IIC T4 GD (surface), Ma Ex ia I M1 (mining)
- ◆ Zone 1/ Division 1 mounting in a suitable enclosure
- ◆ Input voltage: 12V dc nominal (10 – 15.4V)
- ◆ Input current 150mA
- ◆ Extended temperature range (–20°C...+70°C)
- ◆ PoEx™ - "Power over Ethernet" powered device option - accepts module supply via the Cat5e cable*
- ◆ 10/100Mb Ethernet twisted pair (Cat5e) RJ45 Connection (100m max)
- ◆ High Performance ARM9 155MHz 32-bit RISC Processor (ARM926EJ-S)
- ◆ 2x Serial Communication Ports – Baud rates to 115K2 (RS232/TTL Compatible)
- ◆ 2x Serial Communication Ports – Baud rates to 115K2 (RS485/422 2 or 4 wire)
- ◆ Status LED's for :
 - 'Power On'
 - Network 'Link' Established
 - Network 'Tx/Rx Activity'
 - Serial Comms 'Tx/Rx Activity'
- ◆ Simple configuration of IP Address etc.using 9461-ET Finder program
- ◆ Easy set-up of protocol conversion using Windows Internet Explorer or other similar browser. This selects protocols and mapping tables for Ethernet and Serial ports
- ◆ Gives 'Ethernet Connectivity' to Existing Equipment
- ◆ DIN Rail Mounting Module

**Note – PoEx is a simple adaptation of the IEEE 802.3af Power over Ethernet (PoE) standard to bring the benefits to the 9400 Range of Hazardous Area devices. This allows two spare pairs in the existing Cat5e cable to distribute the power supply from a 9466-ET Ethernet Switch (Power Sourcing Equipment – PSE) to each of the devices connected to its five ports (PD – Powered Device). This adaptation is necessary due to restrictions for Hazardous Area use. It is not implied that the device conforms to the 802.3af (PoE) standard.*

2 DESCRIPTION

The 9461-ET 10/100Mbps Ethernet Gateway allows existing equipment with a serial communication port to be connected to an Ethernet network.

Two protocols are available as standard:

- ◆ Real Port (Serial Gateway)
- ◆ Modbus/TCP \leftrightarrow Serial Modbus Gateway

Two 9-way D-type serial ports are provided which are RS232/TTL compatible. The module terminals T6 – T15 also provide two, 2- or 4-wire, RS485/RS422 ports giving a total of four serial ports.

The Gateway can also act as the host processor for the 9466 Managed Ethernet Switch giving remote access to the switch's management features over the Ethernet network.

3 INSTALLATION



WARNING: This equipment must be installed, operated and maintained only by trained competent personnel and in accordance with all appropriate international, national and local standard codes of practice and site regulation for intrinsically safe apparatus and in accordance with the instructions contained here. See also Sections 13, 14 & 15 for approvals and important conditions of safe use.

3.1 Protection

The module requires mounting within an enclosure providing a degree of protection of at least IP6x, in accordance with EN60529 and in a manner that does not impair the existing creepage and clearance distances. The enclosure must also comply with the requirements of Clauses 7 and 8 of EN50014 and be sealed to prevent the ingress of dust.

3.2 Mechanical mounting


3.2.1 DIN rail mounting

The module will 'snap-fit' onto standard DIN rail (TS35) to EN 50022. Height off rail - including any connectors but excluding cables = 112mm.

Tilt the module to engage the top DIN rail clips then rotate down and press to the DIN rail until the lower spring clip is properly engaged.

3.2.2 Flat panel mounting

The module has two fixing holes to enable it to be mounted with two M3.5 screws. Use the following dimension diagram to establish the hole positions. Depth - including connectors but excluding cables = 117mm.

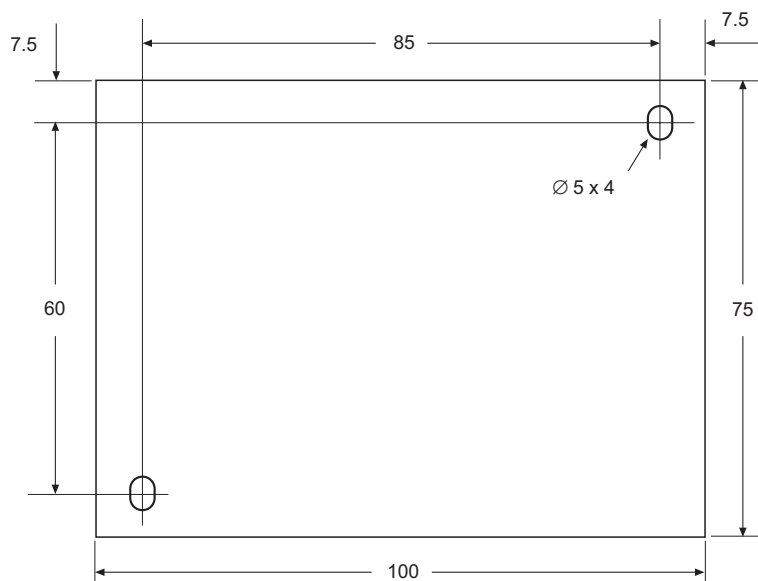


3.3 Electrical connections

DC power can be supplied to the equipment through the front panel screw terminals or alternatively using the Power over Ethernet (PoEx) option where DC power is supplied from a 9466-ET module down the Ethernet Cat5e (or Cat6) cable into the RJ45 connector on the front panel.



WARNING: Whichever wiring method of powering the modules is used, the supply to them must be derived from a suitably certified, intrinsically safe supply.

3.3.1 Screw Terminals

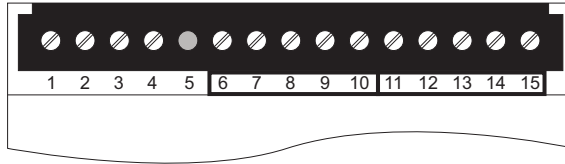

DC power input

Note: An alternative is to supply the power via the Cat5e cable to the RJ45 connector (PoEx)

| Terminal No. | Function | When using PoEx – no supply is required on these terminals. |
|--------------|------------|---|
| 1 | +12V dc in | |
| 2 | +12V dc in | |
| 3 | 0V | |
| 4 | 0V | |

Note: 1. Terminals 1 & 2 and 3 & 4 are linked internally.

COM ports

| Terminal No. | Function |
|--------------|----------------------------------|
| 6 | Y – COM3 + TX/RX (2W) / +TX (4W) |
| 7 | Z – COM3 -TX/RX (2W) / -TX (4W) |
| 8 | A – COM3 +RX (4W) |
| 9 | B – COM3 -RX (4W) |
| 10 | Signal Ground 0V |
| 11 | Y – COM4 + TX/RX (2W) / +TX (4W) |
| 12 | Z – COM4 -TX/RX (2W) / -TX (4W) |
| 13 | A – COM4 +RX (4W) |
| 14 | B – COM4 -RX (4W) |
| 15 | Signal Ground 0V |

3.3.2 Front Panel Connectors

RS232/TTL Ports

COM-1- Serial 9-way D-Type Male

| Pin No. | Function |
|---------|---|
| 1 | DCD |
| 2 | RXD |
| 3 | TXD |
| 4 | RS232/!TTL (Open Circuit = RS232 / 0V (pin5) = TTL) |
| 5 | Signal Ground 0V |
| 6 | N/C |
| 7 | RTS |
| 8 | N/C |
| 9 | +5V o/p |

COM-2 Serial9-way D-Type Male

| Pin No. | Function |
|---------|---|
| 1 | DCD |
| 2 | RXD |
| 3 | TXD |
| 4 | RS232/!TTL (Open Circuit = RS232 / 0V (pin5) = TTL) |
| 5 | Signal Ground 0V |
| 6 | N/C |
| 7 | RTS |
| 8 | N/C |
| 9 | +5V o/p |

Primary functions (may change with software variations)


COM1 = Gateway Serial Port – Software Protocol depends upon Gateway configuration

COM2 = Gateway Serial Port – Software protocol depends upon Gateway Configuration

COM3 = Gateway Serial Port – Software Protocol depends upon Gateway configuration

COM4 = Gateway Serial Port – Software Protocol depends upon Gateway configuration

The minimum cable pin connections required to connect to the serial port (COM 1 or 2) are shown below.

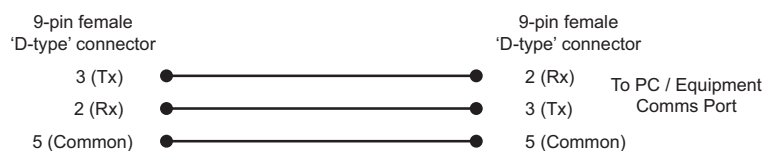**10/100 BASE-T Ethernet RJ45**

| Pin No. | Function | |
|---------|-------------------|--|
| 1 | TX + | When using PoEx – no supply is required on screw terminals 1 to 4 - see above. |
| 2 | TX – | |
| 3 | RX + | |
| 4 | Supply 12V - PoEx | |
| 5 | Supply 12V - PoEx | |
| 6 | RX – | |
| 7 | Supply 0V - PoEx | |
| 8 | Supply 0V - PoEx | |

When connecting the Cat5e cable to a 9466 Ethernet switch, or other device that supports Auto MDI/MDI-X, a straight connected RJ45 cable is used, a cross-over cable is only required if the other device does not support this auto detect mode.

It is recommended that Cat5e cables for Hazardous Area Zone 1 use are 'Blue' in colour and are of good quality (see accessories section), the Safe Area cables being a colour other than blue to aid identification.

4 SOFTWARE INTRODUCTION

9461-ET may be operated in one of two modes:


- ◆ Real Port
- ◆ Modbus Gateway

Real Port is the factory default mode but either mode may be selected with the Gateway management software installed in the gateway and accessible with an internet browser, such as Internet Explorer. To access the software, connect the LAN port to a PC, open a browser and type in the Gateway IP address. The default (Factory Set) IP Address is 192.168.0.200. To discover or to change the IP address to suit your network, use the following procedure, otherwise continue to section 4.2.


4.1 Changing network settings

Run the program 9461-ET Finder.exe. This will automatically search for and locate any 9461-ET gateways connected to the network.

Select (click on) the device you want to configure, then click the configure IP Settings button, which will bring up the following screen.

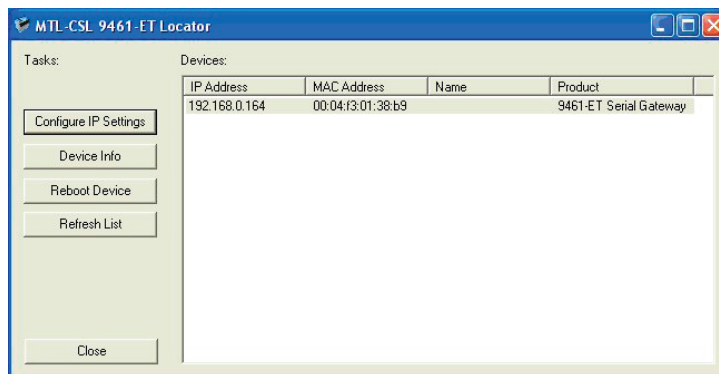


Type in the manual settings you require and then enter the password "CSL". Click the Apply button to send the settings to the 9461-ET. Next reboot the device either by powering it down or by clicking the Reboot Device button (see "Locator" screen above).

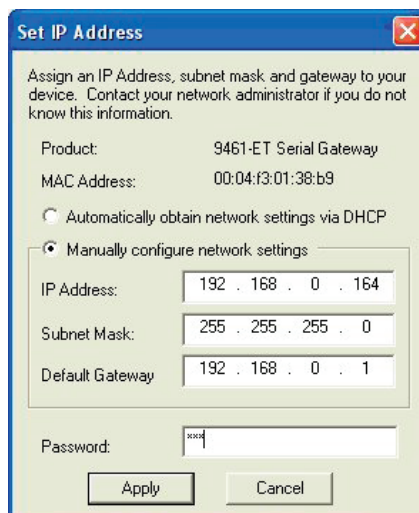


4.2 Setting the operating mode


On entering the Gateway IP address in the browser, the setup software screen should appear, as follows.

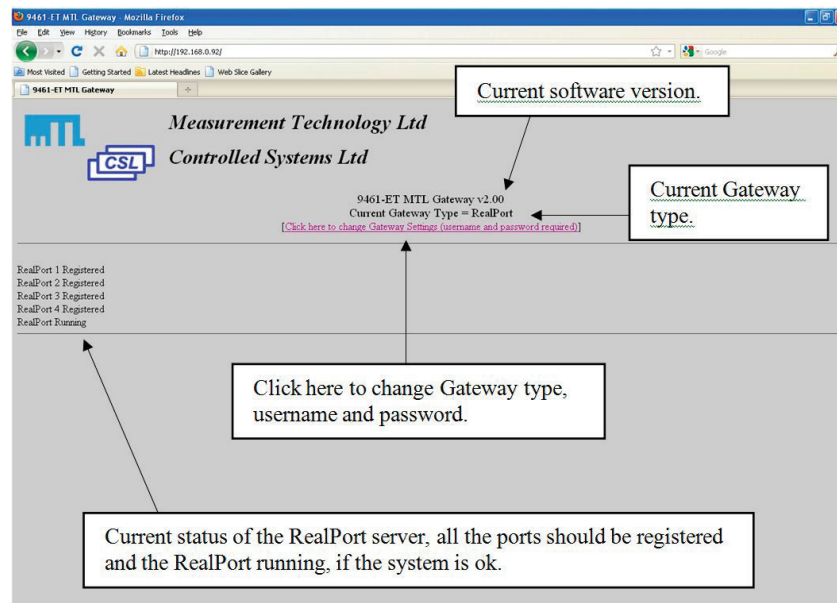


When you click on 'change Gateway Settings' link a dialog comes up asking for user name and password. The defaults are 'USERNAME' and 'PASSWORD', but these can be changed later.

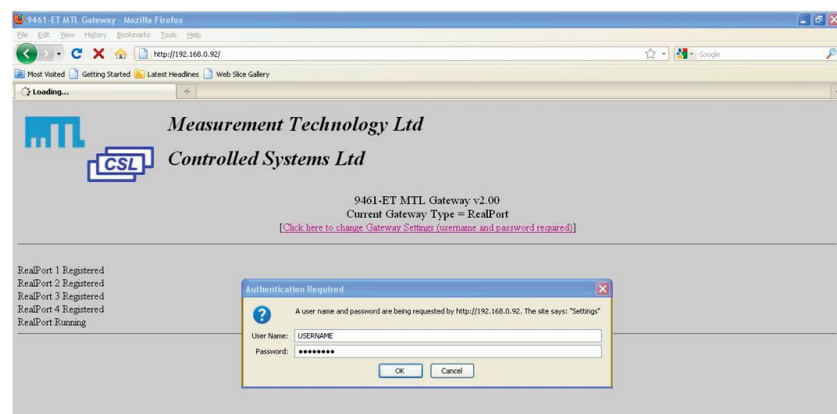


When a correct username and password are entered the following appears allowing the system settings to be altered.

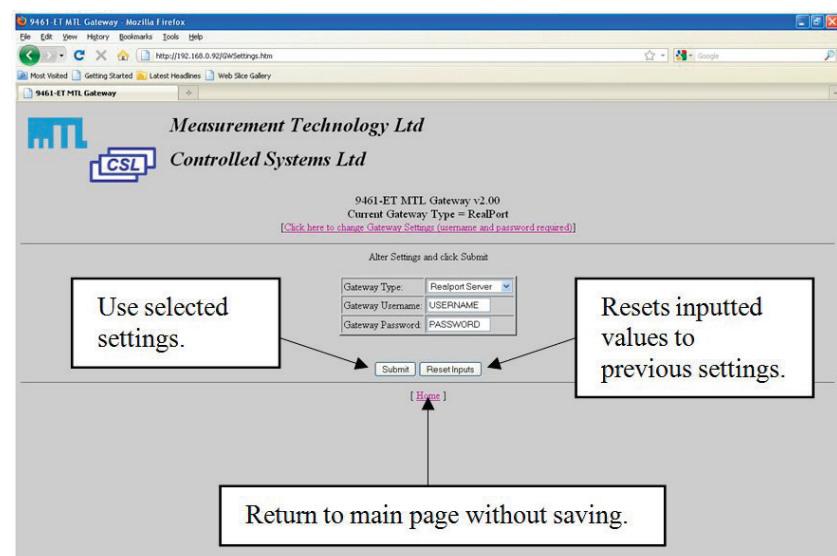


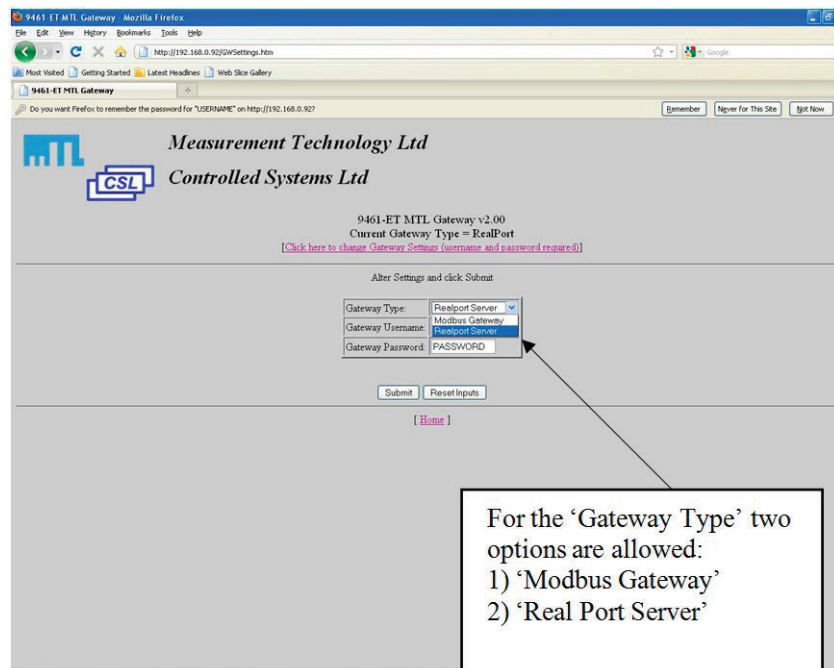

If you do not change any of the settings and click submit the system will not change.

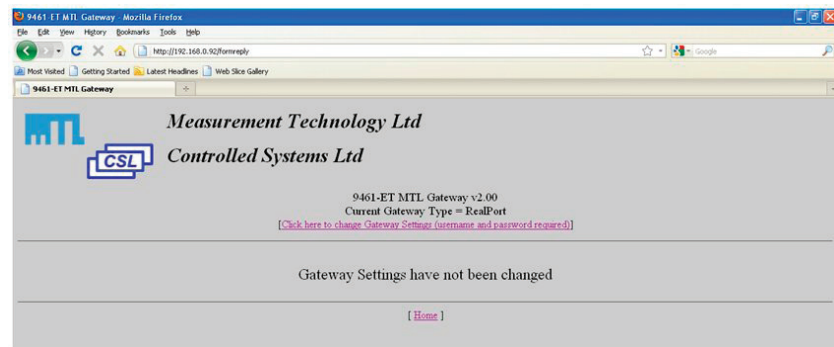

When the settings have changed this time out screen appears whilst the unit reboots. When the timer elapses a link will appear to return to the main page.

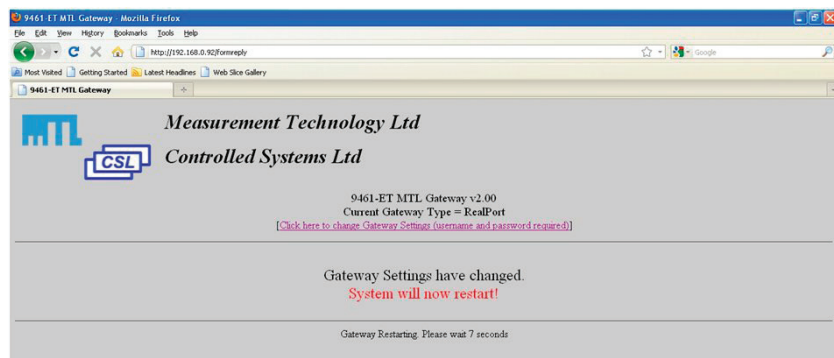


5 REAL PORT MODE


The 9461-ET Serial Gateway utilises the Digi RealPort software, which creates a virtual communications port on the device. If the Real Port software is already installed, go to section 5.2.

5.1 Installing Real Port software

To operate in Real Port mode, download the Real Port software from the “Industrial Networks” section of www.mtl-inst.com and follow the setup instructions.

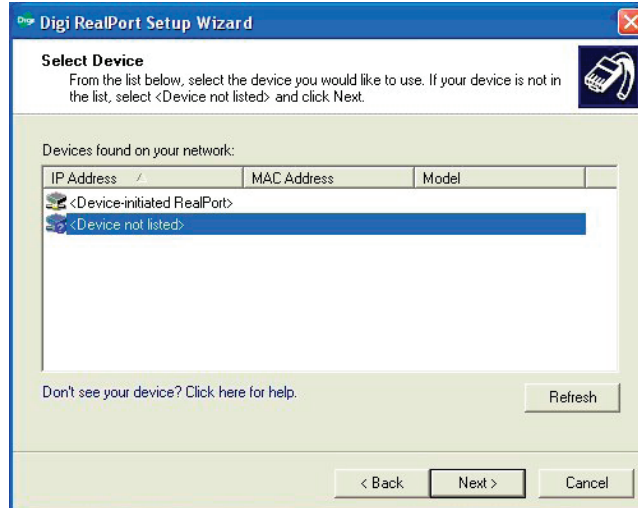

After starting the Real Port Software the following screen will appear.

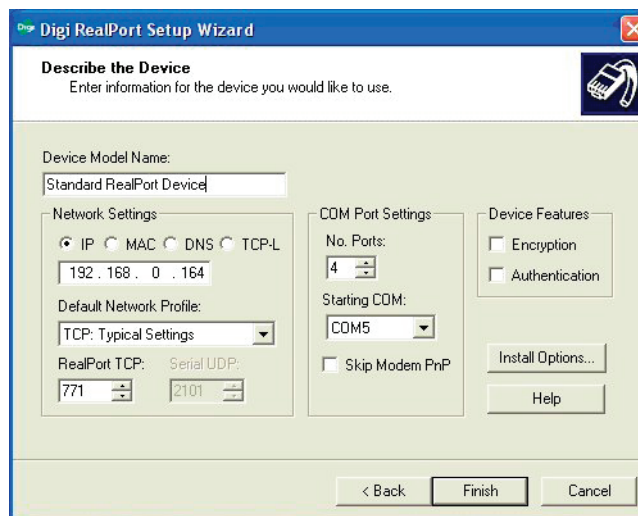

Select “Device not listed” and then click the Next button.


Enter the settings shown, ensuring that the IP address is the one you have decided to use for the device. Click the Finish button to complete the installation.

5.2 Confirming port registration

The device offers 4 ports for use by Real Port. These ports are as follows:-

| | |
|------------------|-------------|
| Port 1 RS232 | Real Port 1 |
| Port 2 RS232 | Real Port 2 |
| Port 3 RS485/422 | Real Port 3 |
| Port 4 RS485/422 | Real Port 4 |

The PC browser can be used to confirm that the ports are registered and that Real Port is running, as shown in the following screen shot.

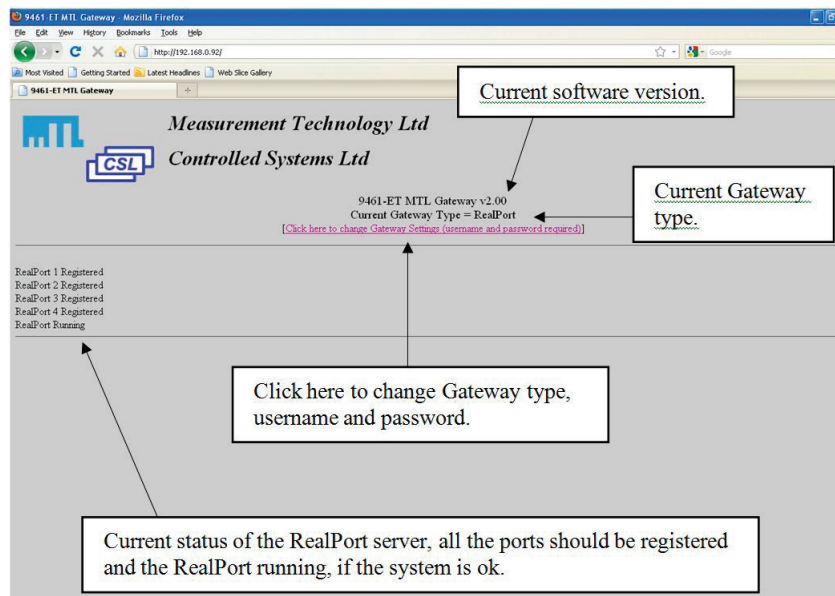

Note: This is the only webpage accessible in the Real Port mode.

6 CONFIGURING REAL PORT

After installation, ports 3 and 4 need to be configured as follows.

Go to the Device Manager (Start|Control Panel|System|Device Manager). Find the check box via the following route:-

In the Device Manager window, click on *Multi-port serial adapters* to view *Standard RealPort Device*. Double-click *Standard RealPort Device* to open the tabbed dialog box.


Choose the *Advanced* tab and click on the *Properties* button.

Choose *Port 3* in the device list and then open the *Advanced* tab.

Click the *Custom Settings* button and Check - **Always use RTS Toggle for Flow Control**.


NOTE: Do this, even if you are not using Hardware handshaking, as this setting is required for correct RS485/RS422 operation.

This procedure for Port 3 is shown below. Repeat for Port 4.

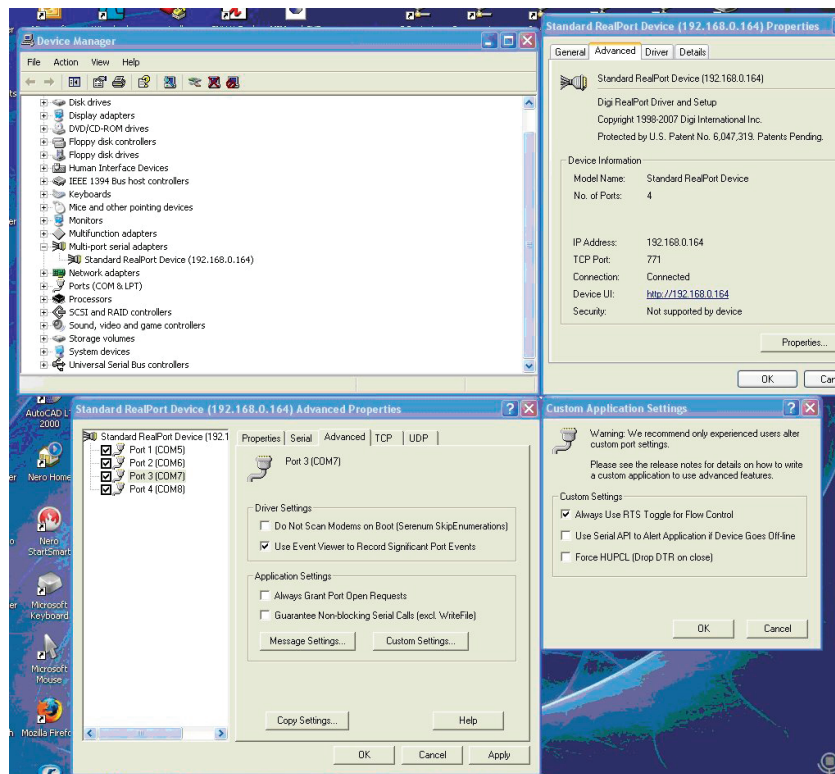


7 RS485 COMMUNICATIONS

In order to use the port for RS485 communications, the TCP tab for Port 3 and Port 4 must be set to "Ignore line and serial settings". Click the "Ignore Settings" button for each port and ensure the settings are the same as those shown below. You may need to reboot after changing these settings.

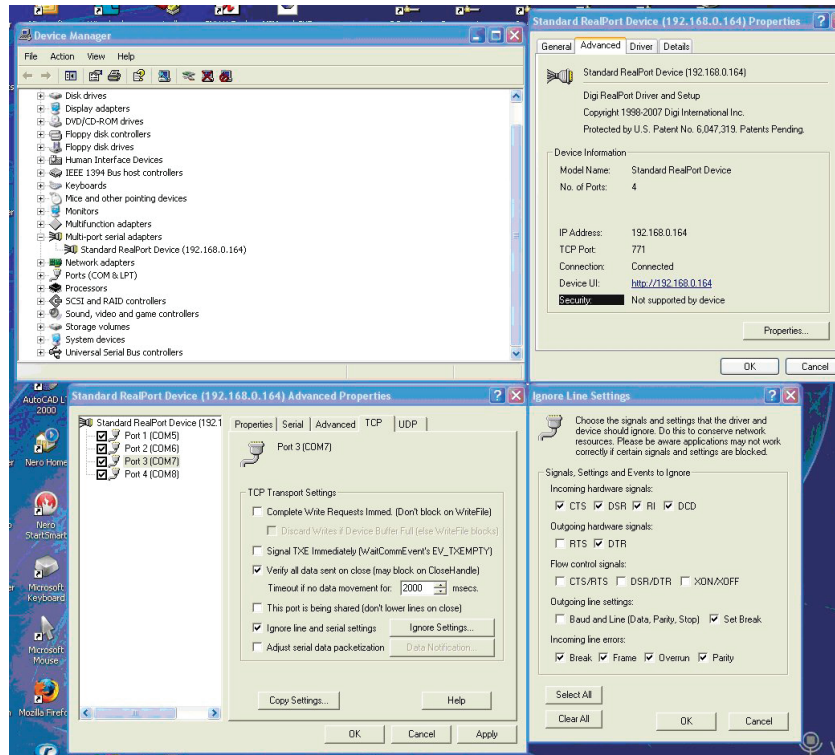

8 RS422 COMMUNICATIONS

In order to use the port for RS422 communications, the TCP tab for Port 3 and Port 4 must be set to "Ignore line and serial settings". Click the "Ignore Settings" button for each port and ensure the settings are the same as those shown below. You may need to reboot after changing these settings.

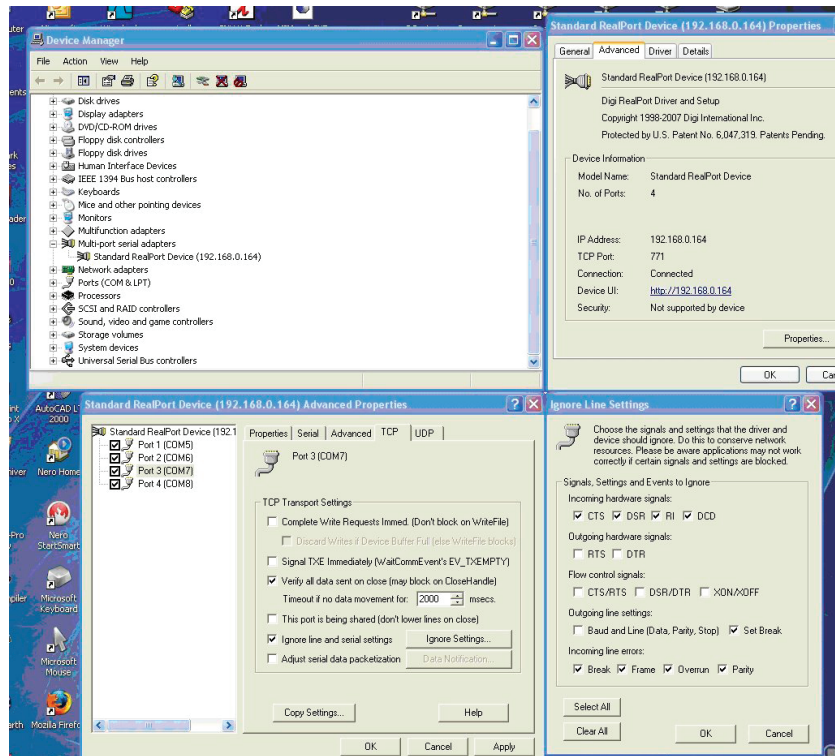

9 MODBUS GATEWAY MODE

When set for Modbus Gateway the following Configuration/Diagnostic screens are accessible via the web browser.

Modbus Port Settings

| CommPort | 1 | 2 | 3 | 4 |
|------------------|-----------|-----------|------------|------------|
| CommMode | RS232/TTL | RS232/TTL | RS485 (2W) | RS485 (2W) |
| BaudRate | 115200 | 1200 | 9600 | 115200 |
| Parity | NONE | NONE | NONE | NONE |
| Packet Timeout | 50 | 240 | 80 | 50 |
| Byte Timeout | 10 | 200 | 30 | 10 |
| Modbus Mode | ASCII | RTU | RTU | RTU |
| Modbus Slave Min | 1 | 11 | 21 | 31 |
| Modbus Slave Max | 10 | 20 | 30 | 40 |

[\[Click here to change settings \(username and password required\)\]](#)

Modbus Diagnostic Counters (refresh to update)

Clients Connected : 16

| IP Address | IP Port | Tx Packets | Rx Packets | Broadcasts | Exceptions | Err | Success | Timeouts | Packet Error | Max Pack | Min Pack |
|-----------------|---------|------------|------------|------------|------------|-----|---------|----------|--------------|----------|----------|
| 192.168.110.240 | 3328 | 66127 | 66127 | 0 | 0 | 0 | 0 | 0 | 0 | 6500 | 0 |
| 192.168.110.1 | 3668 | 198378 | 198378 | 0 | 0 | 0 | 0 | 0 | 0 | 9600 | 0 |
| 192.168.110.240 | 2842 | 87568 | 87518 | 0 | 0 | 0 | 0 | 50 | 0 | 8200 | 0 |
| 192.168.110.1 | 3498 | 238007 | 238007 | 0 | 0 | 0 | 0 | 0 | 0 | 12500 | 0 |
| 192.168.110.1 | 4596 | 87677 | 87677 | 0 | 0 | 0 | 0 | 0 | 0 | 16800 | 0 |
| 192.168.110.1 | 3501 | 263019 | 263019 | 0 | 0 | 0 | 0 | 0 | 0 | 23900 | 0 |
| 192.168.110.2 | 4597 | 87674 | 87674 | 0 | 0 | 0 | 0 | 0 | 0 | 27100 | 0 |
| 192.168.110.240 | 2844 | 263016 | 263016 | 0 | 0 | 0 | 0 | 0 | 0 | 35000 | 0 |
| 192.168.110.1 | 3665 | 66125 | 66125 | 0 | 0 | 0 | 0 | 0 | 0 | 14100 | 0 |
| 192.168.110.1 | 3669 | 66122 | 66122 | 0 | 0 | 0 | 0 | 0 | 0 | 25900 | 0 |
| 192.168.110.2 | 4810 | 198360 | 198360 | 0 | 0 | 0 | 0 | 0 | 0 | 30400 | 0 |
| 192.168.110.2 | 4811 | 66087 | 66087 | 0 | 0 | 0 | 0 | 0 | 0 | 35200 | 0 |
| 192.168.110.1 | 3671 | 66117 | 66117 | 0 | 0 | 0 | 0 | 0 | 0 | 47700 | 0 |
| 192.168.110.240 | 3331 | 66104 | 66104 | 0 | 0 | 0 | 0 | 0 | 0 | 57100 | 0 |
| 192.168.110.2 | 3399 | 378166 | 378165 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 |
| 192.168.110.240 | 3327 | 33064 | 33042 | 0 | 0 | 0 | 0 | 21 | 0 | 0 | 0 |

[\[Click here to clear Counters\]](#)

Click on the link in the upper part of this screen to modify the port settings. Possible settings for the list boxes are shown below.

9461-ET MTL Gateway v2.00
Current Gateway Type = Modbus

[\[Click here to change Gateway Settings \(username and password required\)\]](#)

Alter Settings and click Submit

BaudRate:

- 230400
- 115200
- 57600
- 38000
- 19200
- 9600
- 4800
- 2400
- 1200

Parity:

- None
- Even
- Odd

Modbus Mode:

- RTU
- ASCII

Port 3/4 Mode:

- RS485 (2W)
- RS422 (4W)

Port 1 BaudRate: 19200 Port 1 Parity: NONE
Port 1 Packet Timeout (ms): 100 Port 1 Byte Timeout (ms): 5
Port 1 Modbus Mode: RTU Port 1 Modbus Slave Min: 0 Port 1 Modbus Slave Max: 0

Port 2 BaudRate: 19200 Port 2 Parity: NONE
Port 2 Packet Timeout (ms): 100 Port 2 Byte Timeout (ms): 5
Port 2 Modbus Mode: RTU Port 2 Modbus Slave Min: 0 Port 2 Modbus Slave Max: 0

Port 3 BaudRate: 19200 Port 3 Parity: NONE
Port 3 Packet Timeout (ms): 100 Port 3 Byte Timeout (ms): 5
Port 3 Modbus Mode: RTU Port 3 Mode: RS485 (2W) Port 3 Modbus Slave Min: 0 Port 3 Modbus Slave Max: 0

Port 4 BaudRate: 19200 Port 4 Parity: NONE
Port 4 Packet Timeout (ms): 100 Port 4 Byte Timeout (ms): 5
Port 4 Modbus Mode: RTU Port 4 Mode: RS485 (2W) Port 4 Modbus Slave Min: 0 Port 4 Modbus Slave Max: 0

[Submit](#) [Reset Inputs](#)

[\[Home \]](#)

On completion of the settings, click on the *Submit* button to view the final page.

Measurement Technology Ltd
Controlled Systems Ltd

9461-ET MTL Gateway v2.00
Current Gateway Type = Modbus

[\[Click here to change Gateway Settings \(username and password required\)\]](#)

Modbus Gateway Settings have been changed
Modbus slave settings could be invalid, please check!


[\[Home \]](#)

Modbus TCP packets will be forwarded out of the configured serial ports to the Modbus slaves, and their replies returned to the Modbus TCP Master.

There can be up to a maximum of 16 connected Modbus/TCP clients, each can communicate to multiple slaves/ports as configured.

10 UPDATING THE SOFTWARE ON THE 9461-ET


1. Download the ftp client Mozilla Filezilla. This can be downloaded from the following location: (<http://filezilla-project.org/>)
2. Install and launch Filezilla and confirm its operation.
3. Download and save the file "Firmware V2.xx Modbus-Real Port for 9461-ET" from the MTL site (www.mtl-inst.com/product/intrinsically_safe_ethernet/)

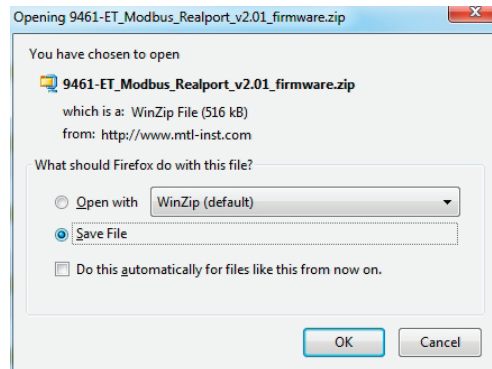

Then unzip the contents (image.bin) to a location and folder of your choice.

4. Ensure that the computer can achieve a physical connection to the 9461-ET, via a patch cable or over the network.
5. Run Filezilla and navigate in the "Local Site" section on the left hand side - see below, to the location where the "image.bin" file was saved.
6. Locate the "Host" text box in the top left of the screen and enter the IP address of the 9461-ET.
7. Enter the word *root* into the "Username" textbox.
8. Enter *CSL* into the "Password" textbox. (Note: This is *case sensitive*)
9. Then click the "Quickconnect" button.

Note: In the screen shot below, the "image.bin" file is located in folder "C:\9461-ET_Modbus_Realport_v2.01_firmware". This should be changed to the location where the image.bin file is stored on your system/PC as explained in item 5 above.

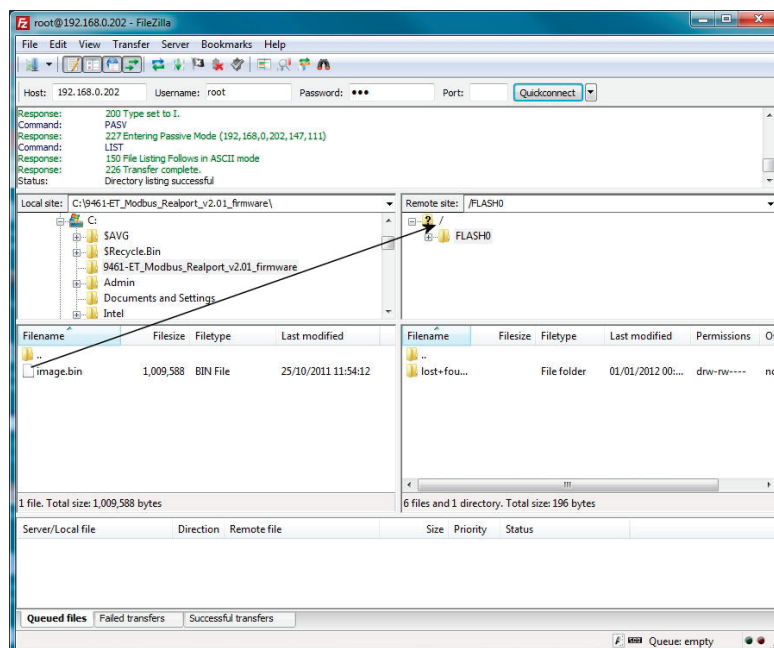

10. Next place the mouse pointer on top of the image.bin file icon in your local system/PC (panel on the left) and left-click-and-drag it to the '/' directory on the 9461-ET (as shown by the arrow in the screen shot) then release the mouse button. A successful transfer should be recorded at the bottom of the screen and a copy of the file should be seen in the right hand pane.

Ensure that the power to the device is not removed at this stage.

11. Finally, shut down Filezilla and the 9461-ET will reboot and load the new software. **Again, do not power down the device – just exit from Filezilla.**

11 ENVIRONMENTAL

Operating Temperature –20°C...+70°C

Storage Temperature –20°C...+70°C

Humidity 5...95% RH, non condensing

12 WASTE REMOVAL INFORMATION



The electronic equipment within must not be treated as general waste. By ensuring that this product is disposed of correctly you will be helping to prevent potentially negative consequences for the environment and human health, which could otherwise be caused by incorrect waste handling of this product.

For more detailed information about the take-back and recycling contact Eaton's MTL product line.

13 ACCESSORIES

For interconnecting the 9460-ET range of products, we offer approved RJ45 Cat5e UTP cables in various standard lengths (0.5...100m)

Ordering details

Copper Twisted Pair UTP Patch Cable (Blue) pre-terminated RJ45-RJ45 connectors

Part No. CSL9405-xx (where -xx is used to signify the length of the cable)

14 APPROVALS

The operating parameters must not exceed those as detailed on the certificate.

- 2014/30/EU EMC Directive
- 2014/35/EU Low Voltage Directive

| Region | Europe (ATEX) | International IECEx | USA | Canada |
|--------------|--|---|---|---|
| Authority | SIRA | SIRA | FM | FMC |
| Standard | EN 60079-0:2006, EN 60079-11:2007, IEC 60079-26:2006, EN 60079-28:2007, EN 50303:2000, IEC 61241-0:2004, IEC 61241-11:2005 | IEC 60079-0:2004, IEC 60079-11:2006, IEC 60079-28:2006-08, IEC 61241-0:2004, IEC 61241-1:2005 | 3600 3610 3810 | C22.2 No. 61010.1:2004 C22.2 No. 157:1992 CAN/CSA-E60079-0:2007 CAN/CSA-E60079-11:2002 |
| Approved for | ⊕ II 1GD Ga Ex ia IIC T4 Ex iaD 20 T135°C (Ta = –40°C to +70°C)* ⊕ I M1 Ma Ex ia I (Ta = –40°C to +70°C) | Ga Ex ia IIC T4 Ex iaD 20 T135°C Ma Ex ia I (Ta = –40°C to +70°C)* | IS/I/1/ABCD/T4 Ta=70°C I/O/AEx ia IIC T4 Ta=70°C | IS/I/1/ABCD/T4 Ta=70°C I/O/AEx ia IIC T4 Ta=70°C |
| Cert. no. | Sira 07ATEX2064X | IECEx SIR 07.0042X | 3034995 | 3034995C |

* see specification for operating temperature range

15 FM CERTIFICATION INFORMATION

Special Condition of Use - Factory Mutual (USA & Canada)

1. The Model 9461-ET shall be installed in compliance with the enclosure, mounting, spacing and segregation requirements of the ultimate application.
2. The Model 9461-ET shall be excluded from use in environments containing chemical vapours of the Ketone or Ester families.

16 ATEX & IECEx CERTIFICATION INFORMATION

The following information is in accordance with the Essential Health and Safety Requirements (Annex II) of the EU Directive 2014/34/EU [the ATEX Directive - safety of apparatus] and is provided for those locations where the ATEX Directive is applicable.

General

- a) This equipment must only be installed, operated and maintained by competent personnel. Such personnel shall have undergone training, which included instruction on the various types of protection and installation practices, the relevant rules and regulations, and on the general principles of area classification. Appropriate refresher training shall be given on a regular basis. [See clause 4.2 of EN 60079-17].
- b) This equipment has been designed to provide protection against all the relevant additional hazards referred to in Annex II of the directive, such as those in clause 1.2.7.
- c) This equipment has been designed to meet the requirements of intrinsically safe electrical apparatus in accordance with EN 60079-0, EN 60079-11 and EN 60079-26.

Installation

- a) reference to the IEC code of practice IEC 60079-14. In addition, particular industries or end users may have specific requirements relating to the safety of their installations and these requirements should also be met. For the majority of installations the Directive 1999/92/EC [the ATEX Directive - safety of installations] is also applicable.
- b) Unless already protected by design, this equipment must be protected by a suitable enclosure against:
 - i) mechanical and thermal stresses in excess of those noted in the certification documentation and the product specification.
 - ii) aggressive substances, excessive dust, moisture and other contaminants.
- c) This equipment is intrinsically safe electrical apparatus and is normally mounted in a hazardous area. When mounted in a Zone1 location the apparatus must be provided with an enclosure, which offers an additional degree of protection appropriate to the area classification.

Read also the Special Conditions for Safe Use for any additional or more specific information.

Special Conditions for Safe Use

1. When used with Group I gases, the Modules shall each be mounted within an enclosure providing a degree of protection of at least IP54, in accordance with EN 60529, and in a manner that does not impair the existing creepage and clearance distances. The enclosure shall also comply with the requirements of Clauses 7 and 8 of EN 60079-0:2006.
2. The connectors do not meet the ingress protection rating of IP20, therefore, this shall be taken into consideration during the installation of the 9400 Series Ethernet Modules when used with Group II gases, and each module shall be provided with an enclosure that is commensurate with the environment into which it is installed.
3. The supply to the modules must be derived from a suitably certified, intrinsically safe supply.

Inspection and maintenance

- a) Inspection and maintenance should be carried out in accordance with European, national and local regulations which may refer to the IEC standard IEC 60079-17. In addition specific

industries or end users may have specific requirements which should also be met.

- b) Access to the internal circuitry must not be made during operation.


Repair

This product cannot be repaired by the user and must be replaced with an equivalent certified product.

Marking

Each device is marked in accordance with the Directive and CE marked with the Notified Body Identification Number.

This information applies to products manufactured during or after the year 2012.

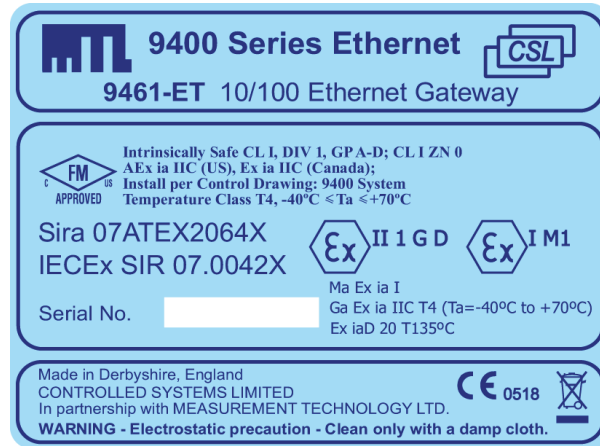

**Replace this page with the first page of
the PDF of the Control Drawing**

**Replace this page with the second page of
the PDF of the Control Drawing**

This page left intentionally blank

This page left intentionally blank

AUSTRALIA

MTL Instruments Pty Ltd,
10 Kent Road, Mascot, New South Wales, 2020, Australia
Tel: +61 1300 308 374 Fax: +61 1300 308 463
E-mail: mtlsalesanz@eaton.com

BeNeLux

MTL Instruments BV
Ambacht 6, 5301 KW Zaltbommel
The Netherlands
Tel: +31 (0)418 570290 Fax: +31 (0)418 541044
E-mail: mtl.benelux@eaton.com

CHINA

Cooper Electric (Shanghai) Co. Ltd
955 Shengli Road, Heqing Industrial Park
Pudong New Area, Shanghai 201201
Tel: +86 21 2899 3817 Fax: +86 21 2899 3992
E-mail: mtl-cn@eaton.com

FRANCE

MTL Instruments sarl,
7 rue des Rosiéristes, 69410 Champagne au Mont d'Or
France
Tel: +33 (0)4 37 46 16 53 Fax: +33 (0)4 37 46 17 20
E-mail: mtlfrance@eaton.com

GERMANY

MTL Instruments GmbH,
Heinrich-Hertz-Str. 12, 50170 Kerpen, Germany
Tel: +49 (0)22 73 98 12-0 Fax: +49 (0)22 73 98 12-2 00
E-mail: csckerpen@eaton.com

INDIA

MTL India,
No.36, Nehru Street, Off Old Mahabalipuram Road
Sholinganallur, Chennai- 600 119, India
Tel: +91 (0) 44 24501660 /24501857 Fax: +91 (0) 44 24501463
E-mail: mtlindiasales@eaton.com

ITALY

MTL Italia srl,
Via San Bovio, 3, 20090 Segrate, Milano, Italy
Tel: +39 02 959501 Fax: +39 02 95950759
E-mail: chmninfo@eaton.com

JAPAN

Cooper Crouse-Hinds Japan KK,
MT Building 3F, 2-7-5 Shiba Daimon, Minato-ku,
Tokyo, Japan 105-0012
Tel: +81 (0)3 6430 3128 Fax: +81 (0)3 6430 3129
E-mail: mtl-jp@eaton.com

NORWAY

Norex AS
Fekjan 7c, Postboks 147,
N-1378 Nesbru, Norway
Tel: +47 66 77 43 80 Fax: +47 66 84 55 33
E-mail: info@norex.no

RUSSIA

Cooper Industries Russia LLC
Elektrozavodskaya Str 33
Building 4
Moscow 107076, Russia
Tel: +7 (495) 981 3770 Fax: +7 (495) 981 3771
E-mail: mtlrussia@eaton.com

SINGAPORE

Cooper Crouse-Hinds Pte Ltd
No 2 Serangoon North Avenue 5, #06-01 Fu Yu Building
Singapore 554911
Tel: +65 6 645 9888 Fax: +65 6 487 7997
E-mail: sales.mtlsing@eaton.com

SOUTH KOREA

Cooper Crouse-Hinds Korea
7F, Parkland Building 237-11 Nonhyun-dong Gangnam-gu,
Seoul 135-546, South Korea.
Tel: +82 6380 4805 Fax: +82 6380 4839
E-mail: mtl-korea@eaton.com

UNITED ARAB EMIRATES

Cooper Industries/Eaton Corporation
Office 205/206, 2nd Floor SJ Towers, off. Old Airport Road,
Abu Dhabi, United Arab Emirates
Tel: +971 2 44 66 840 Fax: +971 2 44 66 841
E-mail: mtlgulf@eaton.com

UNITED KINGDOM

Eaton Electric Ltd,
Great Marlings, Butterfield, Luton
Beds LU2 8DL
Tel: +44 (0)1582 723633 Fax: +44 (0)1582 422283
E-mail: mtl enquiry@eaton.com

AMERICAS

Cooper Crouse-Hinds MTL Inc.
3413 N. Sam Houston Parkway W.
Suite 200, Houston TX 77086, USA
Tel: +1 281-571-8065 Fax: +1 281-571-8069
E-mail: mtl-us-info@eaton.com