

WIO-800LT

wireless I/O transmitter unit



Quick Start Guide

QSG 800LT



ABOUT THIS DOCUMENT

This is the Quick Start Guide for the **MTL WIO-800LT** Wireless I/O Transmitter Unit and contains the following sections:

	Section	Read this section if you want to ...
1	Basic steps for using your unit	Learn the basic steps for installing and using your unit.
2	Factory default configuration	Understand how the transmitter sends information to the receiver.
3	Unit components	Understand the different parts of your unit.
4	Antenna installation	Learn how to install an antenna with your unit.
5	Resetting factory defaults	Reset your unit to the original factory default settings.
6	Linking Tx and Rx units	Link your units to work as a dedicated pair.
7	Safety information	Understand important safety information related to your unit. NOTE: You must read this information before installing your unit.
8	Specifications	See the technical information.

For more information, see the following sections.

1 Basic steps for using your unit

This document describes how to configure your unit using the default factory configuration that lets you easily setup your network as a simple send/receive network using a dedicated pair of transmitter and receiver units.

The basic steps for using your unit are:

1. Connect the antenna power supply and transducer signals using the instructions in this document. Power supply and transducer connection is described in the section Unit components and connections. Antenna connection is described in the section Antenna installation. For more information, see the WIO-800L Installation Manual.
2. Reset the transmitter and receiver units to the factory default configurations.
3. Link the transmitter and receiver units to work as a dedicated pair.
4. Bench test your configuration before deploying.

NOTE: You can also configure your network using a user-defined customised configuration that lets you set specific information about your network. For more information on setting a user-defined customised configuration, see the WIO-800L User Manual on the enclosed CD.


2 Factory default configuration

When you configure the units using the configuration in this document, the inputs from the transmitter are sent to the outputs at the receiver as follows

WIO-800LT(Transmitter)	Sends	WIO-800LR (Receiver)
Digital Input 1	–	Digital Output 1
Digital Input 2	–	Digital Output 2
Analogue Setpoint	–	Digital Output 3
Analogue input (4-20 mA)	–	Analog output (4-20 mA)
Thermocouple Input (Not used)		Communication Failure (Comes on if no messages from WIO-800LT)
Setpoint Output (Local indication)		
System OK (On if system OK)		System OK (On if system OK)

3 Unit components and connections


Your WIO-800LT transmitter unit has the following components and terminal connections:

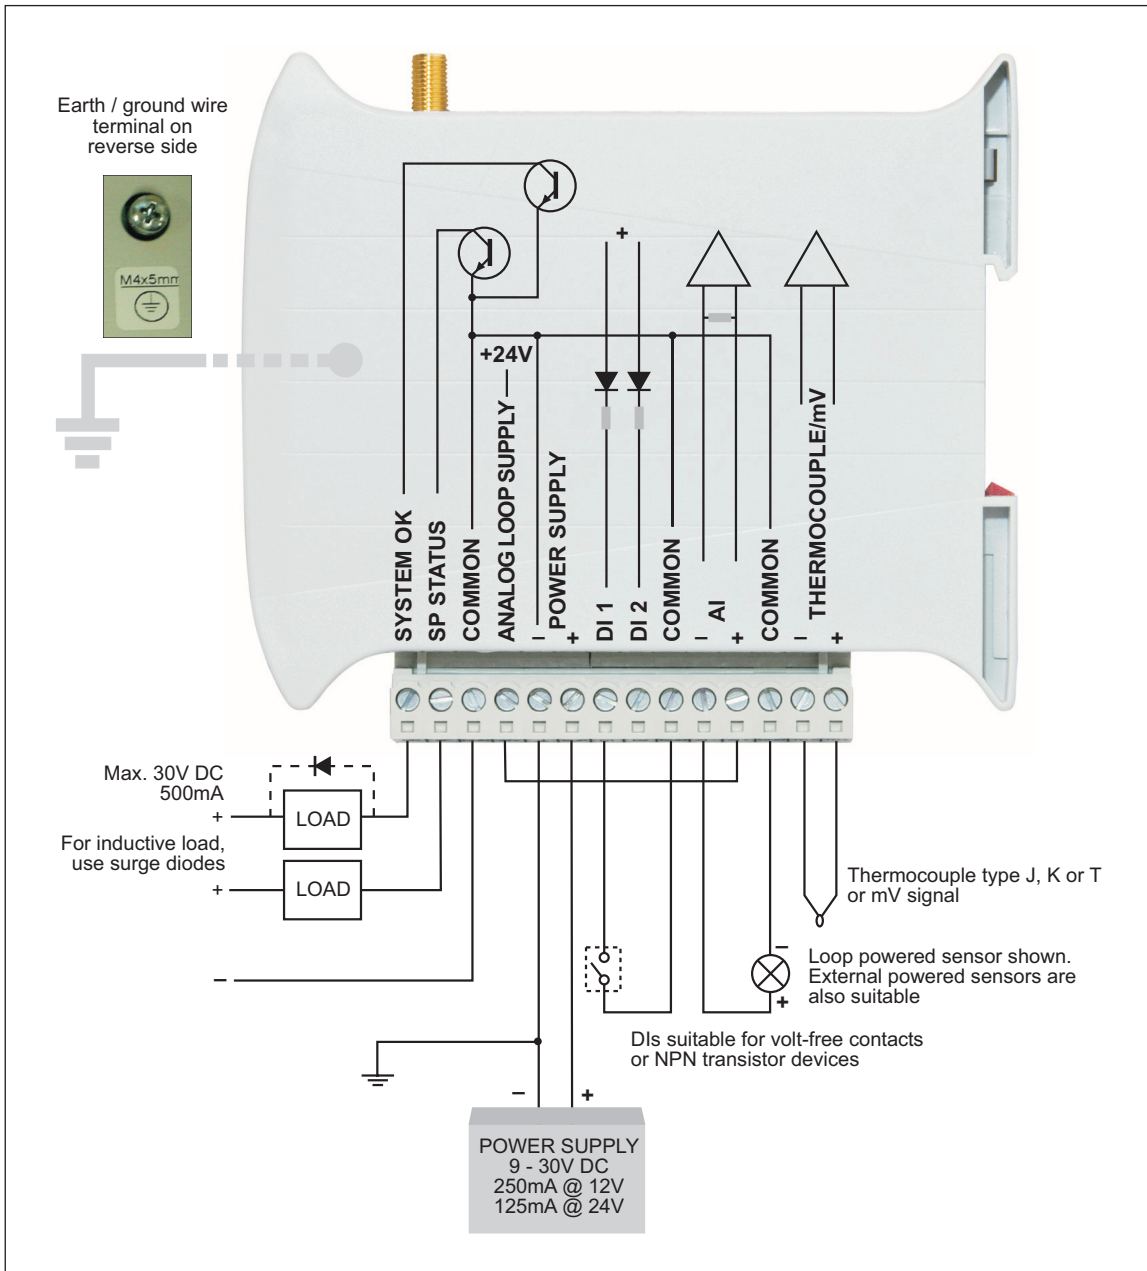


IMPORTANT ELECTRICAL SAFETY INFORMATION

In order to comply with Electrical Safety Regulations, this module must be installed in an Electrical **AND** Fire enclosure. This enclosure may be a single or multiple enclosures. Access to the module is to be made by a Service Person only.

The front panel provides the following components:

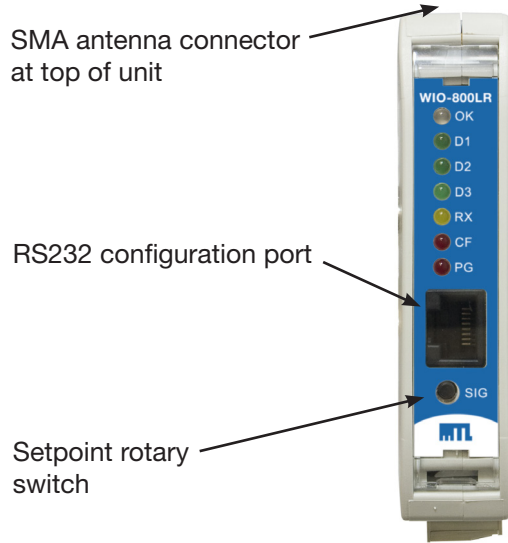

The triangle on the rotary switch indicates the current position, for example:

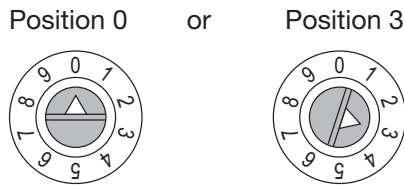

NOTE: To avoid damaging the rotary switch, use a screwdriver to change the position.

The rotary switch uses the following setpoint levels:


Position	Lower level (mA)	Upper level (mA)
1	4.8	6.4
2	6.4	8.0
3	8.0	9.6
4	9.6	11.2
5	11.2	12.8
6	12.8	14.4
7	14.4	16.0
8	16.0	17.6
9	17.6	19.2

The LEDs on the front panel indicate the unit status:

LED Status	Indicates
None	No power supply.
OK Green	Current status of the unit OK.
OK Red	Fault condition detected in unit.
TX Flashes	Transmitting Message.

PG ON	Configuration Cable Connected.	
LED Status	Indicates	
INPUTS ON	The Input LEDs (D1, D2, SP, AZ) light when the corresponding input is active.	
	D1	Digital Input 1 is active (Low).
	D2	Digital Input 2 is active
	SP	Analogue setpoint is active
	AZ	Analogue input is zero mA
All LEDs medium flash	Medium speed flash (1.6HZ) indicates the module is half-way through the configuration process. Medium flash also happens when you set the rotary switch to position 0 when powering on the unit.	

4 Antenna installation

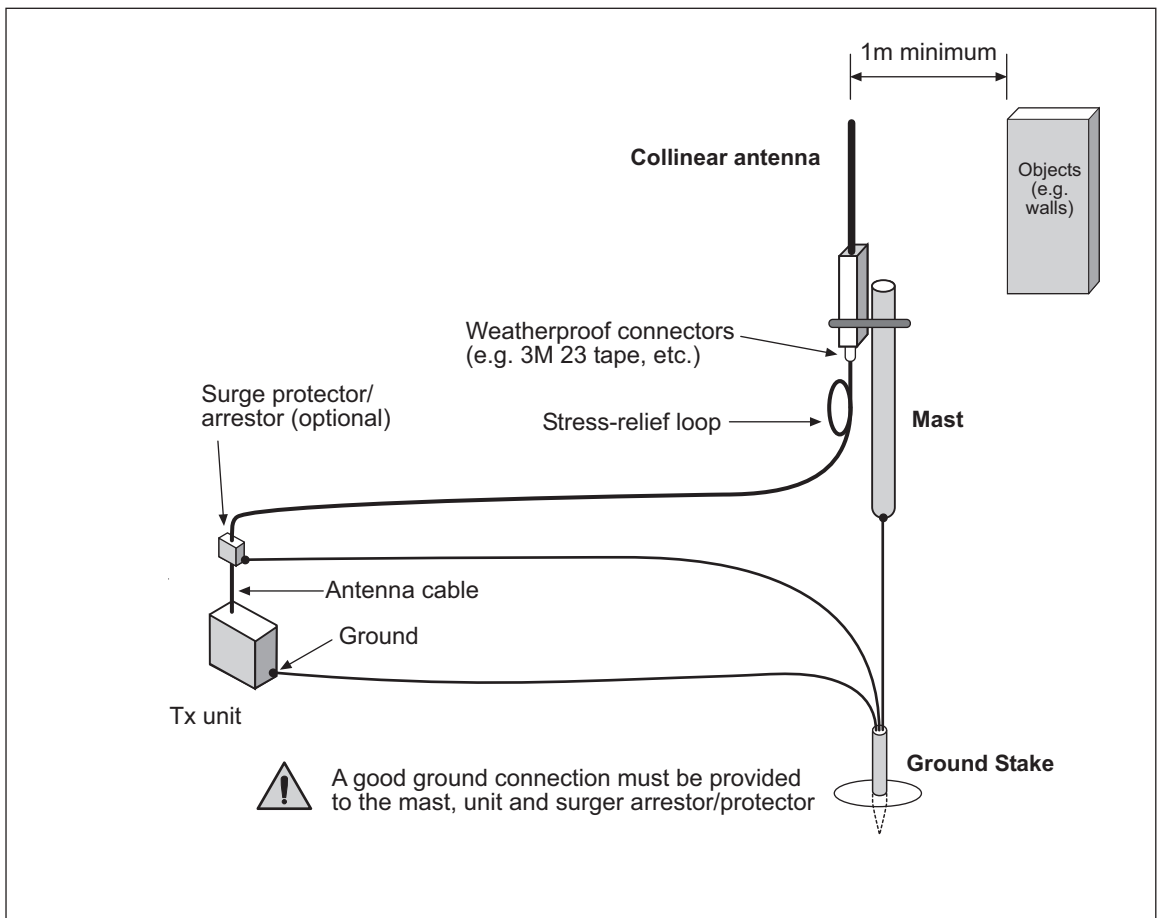

Warning: The antenna must be installed above all local obstructions

5 Resetting your unit to factory defaults

You must reset the receiver unit to factory defaults before linking the transmitter and receiver units.

To reset the default factory configuration:

1. Set the RSSI rotary switch to position 0 using a screwdriver.
2. Power on the WIO-800LT transmitter.
3. The WIO-800LT transmitter flashes all LEDs at medium flash (i.e. 1.6 Hz).

NOTE: If the LEDs do not flash, you must repeat steps 1 and 2 until the LEDs flash before continuing.

4. Set the RSSI rotary switch to another position (e.g. position 1) within 5 seconds.
5. Set the RSSI rotary switch to position 0 within another 5 seconds.
6. The WIO-800LT transmitter lights all LEDs for 2 seconds before returning to normal operation.

NOTE: If the LEDs do not light, you must repeat the process from step 1 until the LEDs light before continuing.

7. You can now link the transmitter and receiver units.

6 Linking your transmitter and receiver units

You must reset the transmitter unit to factory defaults (to disable encryption) before linking the transmitter and receiver units. For more information, see the previous section.

NOTE: You must complete the linking process in 60 seconds.

To link the transmitter and receiver units:

1. Press and hold down the RSSI Pushbutton on the receiver.
2. Power on the receiver while holding down the RSSI Pushbutton
3. Release the RSSI Pushbutton as soon as the Receiver LEDS flash (within 5 seconds of powering the receiver).
4. The receiver will flash all LEDs for a maximum 60 seconds while it tries to link to the transmitter.
5. Power on the transmitter. The transmitter sends a special "Link" message to allow the receiver to recognise the transmitter.
6. When the units link, the receiver lights all LEDs for 2 seconds before returning to normal operation.

NOTE: If the receiver LEDs continue flashing within the 60 seconds, the units are not linked and you should retry the linking process by powering the transmitter off and on again. If you exceed the 60 seconds, you must restart the linking process from step 1.

You can now bench test your configuration before deploying.

7 Safety information

Thank you for selecting the WIO-800LT transmitter for your telemetry needs. We trust it will give you many years of valuable service. To ensure your WIO-800LT transmitter enjoys a long life, double-check ALL your connections with the user's manual before powering on the unit.

WARNING: Incorrect termination of supply wires may cause internal damage and will void warranty.

8 Unit specifications

Input/output	Number	Additional information
Digital inputs	2	Dry-contact digital inputs slow-pulsed at 10Hz. All inputs are suitable for voltage free contacts (e.g. mechanical switches) or NPN transistor devices (e.g. electronic proximity switches). NOTE: PNP transistor device inputs are NOT suitable.
Analog inputs	1	0-20mA differential input; 16-bit resolution, 0.1% accuracy, 10 ohm input impedance.
Thermocouple inputs	1	J, K or T type thermocouple with on-board cold-junction compensation. Cold junction compensation accuracy $\pm 1^\circ$ over ambient temp range: -40° to $+60^\circ\text{C}$.
Power supply	1	9-30 VDC 1 Amp CSA certified Class 2 power supply. For use in Class I Div 2 hazardous areas, the power supply must be approved for Class I Div 2 use. WARNING: Explosion hazard - do not connect or disconnect while circuit is live unless area is known to be non-hazardous.
Transmitter	1	5 mW or 500 mW DFSK Fixed Frequency Transmitter.
Frequency	868.525 MHz 869.875MHz	500 mW - 5km out of plant, 1km obstructed environment. 5 mW - 1km out of plant. 300m obstructed environment

MTL Instruments Pty Limited

9 /12 Billabong Street
Stafford
Queensland 4053
Australia
Tel: + 61 1300 308 374 Fax: + 61 1300 308 463
E-mail: enquiries@mtlaus.com.au

Cooper Electric (Shanghai) Co. Ltd.

Room 2001, China Life Tower
16 Chao Yang Men Wai Street
Chao Yang District, Beijing
China 100020
Tel: + 86 10 5980 0288 Fax: + 86 10 8562 5725
E-mail: bjsales@mtl-inst.cn

MTL Instruments sarl

Les Carrés du Parc
10 rue des Rosiéristes
69410 Champagne au Mont d'Or
France
Tel: +33 (0)4 78 64 98 32 Fax: +33 (0)4 78 35 79 41
E-mail: info@mtl-inst.fr

MTL Instruments GmbH

An der Gumpgesbrücke 17
D-41564 Kaarst
Germany
Tel: +49 (0)2131 718930 Fax: +49 (0)2131 7189333
E-mail: info@mtl.de

MTL India

No. 36, Nehru Street
Off Old Mahabalipuram Road
Sholinganallur
Chennai - 600 119
India
Tel: + 91 (0)44 24501660/24501857 Fax: + 91 (0)44 24501463
E-mail: sales@mtlindia.com

MTL Italia srl

Via Cantù 11
I - 20092 Cinisello Balsamo MI
Italy
Tel: +39 (0)2 61802011 Fax: +39 (0)2 61294560
E-mail: info@mtl-inst.it

Cooper Crouse-Hinds Japan KK

MT Building 3F
2-7-5 Shiba Daimon
Minato-ku Tokyo
Japan 105-0012
Tel: +81 (0)3 6430 3128 Fax: +81 (0)3 6430 3129
E-mail: sales@mtlkk.co.jp

Cooper Crouse-Hinds Korea

12F, Vision Tower
707-2 Yeoksam-dong, Gangnam-gu
Seoul 135-080
South Korea
Tel: +82 2 3484 6795 Fax: +82 2 3484 6778

MTL Instruments BV

MTL Instruments BV
Terheijdenseweg 465
4825BK Breda
The Netherlands
Tel: +31 (0)76 7505360 Fax: +31 (0)76 7505370
E-mail: info@mtlbenelux.com

Cooper Crouse-Hinds Pte Ltd.

No.2 Serangoon North Avenue 5
#06-01 Fu Yu Building
Singapore 554911
Tel: +65 6 487 7887 Fax: +65 6 487 7997
E-mail: sales@mtlsing.com.sg

MTL Instruments

Villa No. 4, Sector 2-17, Street 6
PO Box 53234,
Abu Dhabi, UAE
Tel: +971 2 446 6840 Fax: +971 2 446 6841
E-mail: mtlgulf@mtl-inst.com

Measurement Technology Limited

Great Marlings, Butterfield, Luton, Beds
England LU2 8DL
Tel: +44 (0)1582 723633 Fax: +44 (0)1582 422283
E-mail: enquiry@mtl-inst.com

Cooper Crouse-Hinds MTL Inc

3413 N. Sam Houston Parkway W.
Suite 210
Houston TX 77086
USA
Tel: +1 281 571 8065 Fax: +1 281 571 8069
E-mail: csinfo@mtl-inst.com

