


BA414DF
Intrinsically safe
Field mounting
Fieldbus Indicator

Issue: 2

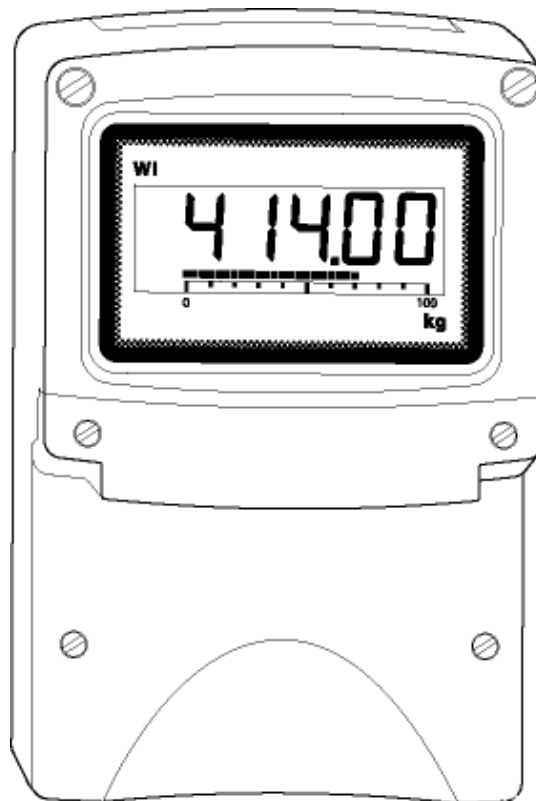

CONTENTS

1. Description

- 1.1 Documentation

2. Intrinsic Safety Certification

- 2.1 ATEX certificate
- 2.2 Zones, gas groups and T rating
- 2.3 Fieldbus connection
- 2.4 Certification label Information

3. System Design for Hazardous Area

- 3.1 FISCO Systems
- 3.2 Non-FISCO Systems

4. Installation

- 4.1 Location
- 4.2 Installation procedure
- 4.3 EMC

5. Maintenance

- 5.1 Fault finding during commissioning
- 5.2 Fault finding after commissioning
- 5.3 Servicing
- 5.4 Routine maintenance
- 5.5 Guarantee
- 5.6 Customer comments

6. Accessories

- 6.1 Scale and Tag marking
- 6.2 Tag plate
- 6.3 Pipe mounting kits
- 6.4 Fieldbus Interface Guide

7. Index

Appendix 1

ATEX dust certification

Appendix 2

FM Approval for use in the USA and
CFM Approval for use in Canada.

Appendix 3

IECEX certification

The BA414DF is CE marked to show compliance with the European Explosive Atmospheres Directive 94/9/EC and the European EMC Directive 89/336/EEC

1. DESCRIPTION

The BA414DF Fieldbus Indicator is an intrinsically safe, FOUNDATION Fieldbus™ instrument that can display one fieldbus process variable on a five digit LCD and 31 segment analogue bargraph. The instrument is bus powered so no additional power supply is required.

Communication Protocol	Fieldbus Function Block
FOUNDATION Fieldbus	Input Selector (1 x IS)

The Device Description files may be downloaded from The Fieldbus Foundation or the BEKA associates web sites.

Housed in a robust IP66 glass reinforced polyester (GRP) enclosure with a toughened glass window, the BA414DF is surface mounting, or may be pipe mounted using one of the accessory kits.

The instrument is intrinsically safe and has been certified by European Notified Body Intertek Testing and Certification Ltd (ITS) to the ATEX Directive 94/9/EC for use in explosive gas and combustible dust atmospheres. ATEX dust certification is an option – see Appendix 1.

For use in the USA and Canada, the BA414DF is available with optional intrinsic safety and nonincendive FM and CFM Approval – see Appendix 2.

For international applications, all versions of the BA414DF fieldbus indicator have IECEx intrinsic safety approval allowing installation in explosive gas atmospheres. IECEx dust certification is available as an option – see Appendix 3.

1.1 Documentation

This instruction manual describes ATEX system design and installation of the BA414DF Fieldbus Indicator. For commissioning information please refer to:

FOUNDATION Fieldbus
Fieldbus Interface Guide
for
Fieldbus Displays and
Fieldbus Indicators

which can be requested via the BEKA web site www.beka.co.uk

System design information for non-ATEX and dust approvals is shown in appendices to this manual.

2. INTRINSIC SAFETY CERTIFICATION

2.1 ATEX certificate

The BA414DF has been issued with an EC-Type Examination Certificate by Notified Body Intertek Testing and Certification Ltd (ITS) confirming compliance with the European ATEX Directive 94/9/EC for Group II, Category 1, gas and dust atmospheres, EEx ia IIC T4. The instrument bears the Community Mark and, subject to local codes of practice, may be installed in any of the European Economic Area (EEA) member countries. ATEX certificates are also acceptable for installations in Switzerland.

This manual describes ATEX installations in explosive gas atmospheres which conform with BS EN60079:Part14:2003 Electrical Installation in Hazardous Areas. When designing systems for installation outside the UK, the local Code of Practice should be consulted.

For use in the presence of combustible dust, please refer to Appendix 1 which describes ATEX installations complying with BS EN50282-1-2:1999.

2.2 Zones, gas groups and T rating

The BA414DF has been issued with EC Type Examination certificate ITS06ATEX25313 confirming that it complies with the requirements for Group II Category 1 G EEx ia IIC T4 (Tamb –40 to 70°C) specified in the ATEX Directive. When connected to a suitable certified system the BA414DF may be installed in:

- Zone 0 explosive gas air mixture continuously present.
- Zone 1 explosive gas air mixture likely to occur in normal operation.
- Zone 2 explosive gas air mixture not likely to occur, and if it does will only exist for a short time.

Be used with gases in groups:

- Group A propane
- Group B ethylene
- Group C hydrogen

Having a temperature classification of:

- T1 450°C
- T2 300°C
- T3 200°C
- T4 135°C

At an ambient temperature between –40 and +70°C.

Note: the guaranteed operating temperature range of the BA414DF Fieldbus Indicator is –20 to +70°C

This allows the BA414DF to be installed in all Zones and to be used with most common industrial gases.

2.3 Fieldbus connection

The BA414DF Indicator is powered and communicates via the fieldbus, which is connected to terminals 1 and 2. These are non-polarised, comply with the Fieldbus Intrinsically Safe Concept (FISCO) defined in IEC 60079 Part 27 and have separate entity parameters shown below:

	FISCO	Entity
U _i	= 17.5V dc	22.0V dc
I _i	= 380mA dc	250mA dc
P _i	= 5.32W	1.2W

The maximum equivalent capacitance and inductance at terminals 1 & 2 is:

C _i	=	0nF
L _i	=	8µH

2.4 Certification Label Information

The certification information label is fitted in a recess on the top outer surface of the enclosure. It shows details of the ATEX certification, a statement that the instrument is a FISCO Field Device, plus BEKA associates name and location. IECEx approval information is also included. The label for some versions of the instrument will also contain non-European certification information.

The instrument serial number and year of manufacture are recorded on a separate label inside the terminal compartment.

BA414DF Fieldbus Indicator	
CE 0359 Ex II 1 G	T _{amb} = -40°C to +70°C EEx ia IIC T4 ITS06ATEX25313
	FISCO Field Device EEx ia IIC T4
	Ex ia IIC T4 T _a = -40°C to +70°C IECEx ITS 06.0012
Year of manufacture shown within terminal compartment	
BEKA associates Hitchin England www.beka.co.uk	

ATEX
FISCO
IECEx

3. SYSTEM DESIGN FOR HAZARDOUS AREAS

3.1 FISCO Systems

The BA414DF may be connected to any ATEX certified FISCO compliant fieldbus segment, providing the segment can supply the additional 13mA required to operate the instrument.

Fig 1 shows a typical fieldbus segment. To comply with FISCO requirements, the power supply, terminators, field devices and the interconnecting cables must conform with IEC60079 part 27.

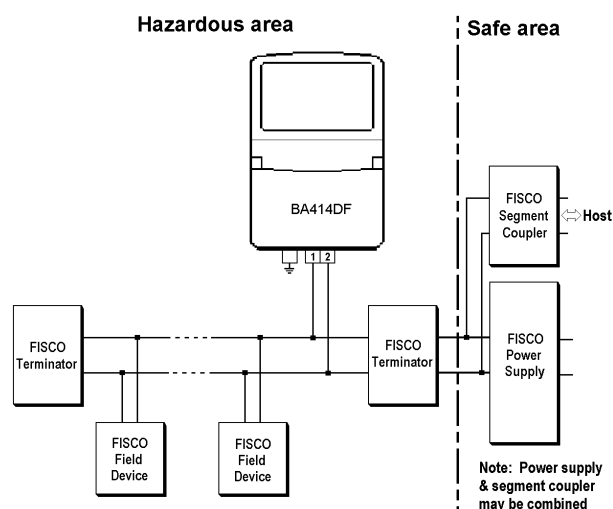


Fig 1 FISCO fieldbus system

3.2 Non-FISCO Systems

For non-FISCO applications the BA414DF Fieldbus Indicator has a higher voltage entity intrinsic safety input parameter allowing connection to a wide range of fieldbus segments.

The BA414DF Fieldbus Indicator may be connected to any intrinsically safe segment providing:

The device powering the fieldbus segment is ATEX certified and has output parameters equal to or less than:

U _o	=	22V dc
I _o	=	250mA dc
P _o	=	1.2W

The segment can provide an additional 13mA to power the Fieldbus Indicator.

The equivalent capacitance C_i of the BA414DF Fieldbus Indicator is zero and the equivalent inductance is insignificant. Therefore these BA414DF parameters do not need to be considered.

4. INSTALLATION

4.1 Location

The BA414DF Fieldbus Indicator is housed in a robust IP66 glass reinforced polyester (GRP) enclosure incorporating an armoured glass window and stainless steel fittings. It is suitable for exterior mounting in most industrial environments, including offshore and wastewater treatment installations. Please consult BEKA associates if high vibration is anticipated.

The BA414DF enclosure is surface mounting. Accessory kits described in sections 6.3 of this manual enable the instrument to be mounted onto a vertical or horizontal pipe.

The field terminals and the two mounting holes are located in a separate compartment with a sealed cover allowing the instrument to be installed without exposing the display assembly.


The BA414DF earth terminal is connected to the carbon loaded GRP enclosure. If this enclosure is not bolted to an earthed post or structure, the earth terminal should be connected to a local earth.

The BA414DF enclosure is supplied with a bonding plate to ensure electrical continuity between the three conduit / cable entries.

4.2 Installation Procedure


Fig 2 illustrates the instrument installation procedure.

- a. Remove the instrument terminal cover by unscrewing the two captive 'A' screws.
- b. Mount the instrument on a flat surface and secure with two M6 screws through the 'B' holes. Alternatively use one of the mounting kits described in section 6.3
- c. Remove the temporary dust seals from the three cable entries and install the required glands, conduit fittings or blanking plugs.
Note: The temporary dust seals fitted for transit do not maintain the IP66 protection of the BA414DF enclosure.
Cable glands, conduit fittings, blanking plugs and cables must be suitable for continuous use at the maximum operating temperature of the instrument.
- d. Connect the field wiring to the terminals as shown in Fig 3.
- e. Replace the instrument terminal cover and evenly tighten the two 'A' screws.

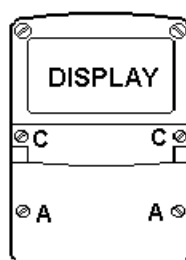


Step a

Remove the terminal cover by unscrewing the two 'A' screws

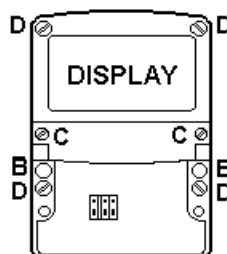

Step b

Secure the instrument to a flat surface with M6 screws through the two 'B' holes. Alternatively use a pipe mounting kit.

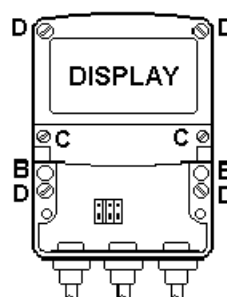

Steps c, d and e

Install appropriate IP rated cable glands, conduit fittings or blanking plugs and terminate field wiring. Finally replace the terminal cover and tighten the two 'A' screws.

Fig 2 BA414DF installation procedure

4.3 EMC

The BA414DF complies with the requirements of the European EMC Directive 89/336/EEC. For specified immunity, all wiring should be in screened twisted pairs with the screens earthed at one point in the safe area.

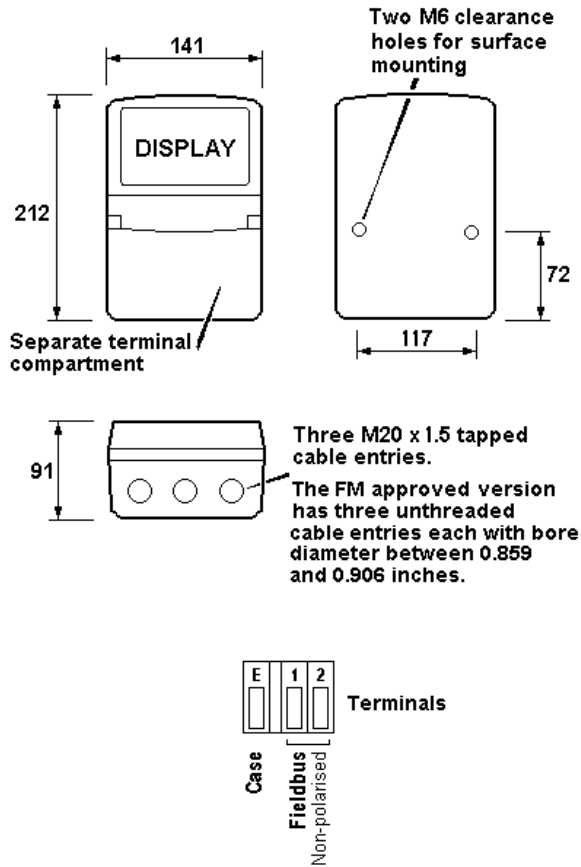


Fig 3 Dimensions and terminal connections

5. MAINTENANCE

5.1 Fault finding during commissioning

If a BA414DF fails to function during commissioning the following procedure should be followed:

Symptom	Cause	Check:
No Display	Instrument not correctly connected or powered.	9 to 22V between terminals 1 & 2.
Display shows '9.9.9.9.9' with all decimal points flashing; all bargraph segments activated and bargraph scale flashing.	Value over-range	Variable source Decimal point configuration.
Display shows '-9.9.9.9.9' with all decimal points flashing; no bargraph segments activated and bargraph scale flashing.	Value under-range	Variable source Decimal point configuration
Display alternates between value and the word 'bAd'. Bargraph flashes.	Status of fieldbus variable has a quality of 'BAD' or a fault state is active. Display has not yet received data.	Variable source Fieldbus configuration.
Bargraph scale flashes.	Variable is outside the limits defined for the bargraph.	Bargraph configuration.
All display segments activated.	Display is initialising.	This is normal operation, after a few seconds the firmware version will be displayed prior to entering the operational mode.

5.2 Fault finding after commissioning

ENSURE PLANT SAFETY BEFORE STARTING MAINTENANCE

Live maintenance is permitted on intrinsically safe equipment installed in a hazardous area, but only certified test equipment should be used unless a gas clearance certificate is available.

If a BA414DF fails after it has been functioning correctly, the table shown in section 5.1 may help to identify the cause of the failure.

If this procedure does not reveal the cause of the fault, it is recommended that the instrument is replaced.

5.3 Servicing

We recommend that faulty BA414DF Fieldbus Indicators are returned to BEKA associates or to our local agent for repair.

5.4 Routine maintenance

The mechanical and electrical condition of the instrument should be regularly checked. Initially annual inspections are recommended, but the inspection frequency should be adjusted to suit the environmental conditions.

5.5 Guarantee

Instruments which fail within the guarantee period should be returned to BEKA associates or our local agent. It is helpful if a brief description of the fault symptoms is provided.

5.6 Customer comments

BEKA associates is always pleased to receive comments from customers about our products and services. All communications are acknowledged and whenever possible, suggestions are implemented.

6. ACCESSORIES

6.1 Scale and tag marking

BA414DF indicators are fitted with a blank escutcheon around the liquid crystal display. If specified when the instrument is ordered, this can be supplied printed with units of measurement and tag information, plus a scale for the horizontal bargraph. Alternatively, information may be added on-site via an embossed strip, dry transfer or a permanent marker.

To gain access to the display escutcheon remove the terminal cover by unscrewing the two 'A' screws which will reveal two concealed 'D' screws. Unscrew all four 'D' screws and carefully lift off the front of the instrument. The location of all these screws is shown in Fig 2.

After adding the required legends, or fitting a new pre-printed self-adhesive escutcheon, ensure that the gasket is correctly positioned before reassembling the instrument enclosure.

6.2 Tag plate

The BA414DF can be supplied with a blank or custom laser marked stainless steel plate secured by two screws to the front of the instrument enclosure. This plate can accommodate:

1 row of 9 alphanumeric characters 10mm high

or 1 row of 11 alphanumeric characters 7mm high

or 2 rows of 18 alphanumeric characters 5mm high

6.3 Pipe mounting kits

Two pipe mounting kits are available for securing the BA414DF to a horizontal or vertical pipe.

BA392D Stainless steel bracket secured by two worm drive hose clips for 60 to 80mm outside diameter pipes.

BA393 Heavy-duty stainless steel bracket secured by a single 'V' bolt. Will clamp to any pipe with an outside diameter between 40 and 80mm.

6.4 Fieldbus Interface Guide

The *FOUNDATION Fieldbus Interface Guide for Fieldbus Displays & Fieldbus Indicators* contains commissioning information for the BA414DF. A copy may be requested from the BEKA sales office or from the BEKA web site at www.beka.co.uk

7. INDEX

Subject	Section	Subject	Section
ATEX Directive	2.1	Notified Body	1; 2.1
Codes	2.2		
Dust certification	Appendix 1	Pipe mounting kits	6.3
Canadian certification	1.0; Appendix 2	Servicing	5.3
Certification		Scale marking	6.1
ATEX	2.1	Tag marking	6.1
Canadian	1.0; Appendix 2	Tag plate	6.2
EC-Type Examination	2.1	T rating	2.2; Appendix 1; 2 3 & 4.
FM	Appendix 2	Terminal numbers	Fig 3
IECEX	Appendix 3		
Label ATEX gas	2.4	Units of measurement	6.1
Label ATEX dust	A1.2	Zones	2.2; Appendix 1; 2 & 3.
Decimal Points	5.1		
Divisions	Appendix 2		
Documentation	1.1		
Dust certification	Appendix 1; 2; 3 & 4.		
EMC	4.3		
Fault finding			
During commissioning	5.1		
After commissioning	5.2		
Fieldbus			
Connection	3; Fig 3		
Foundation	1; 3		
Guide	1.1; 6.4		
Firmware version number	6.1		
FISCO	2.3; 2.4; 3.1		
FM Approval	Appendix 2		
Function Blocks	1.		
Gas groups	2.2		
Guarantee	5.5		
IECEX Certification	Appendix 3		
Installation	4.		
Intrinsic safety	2; Appendix 1; 2; 3 & 4.		
Location	4.1 Appendix 1; 2; 3 & 4		
Maintenance	5.		
Routine	5.4		

APPENDIX 1 ATEX dust certification

A1.0 ATEX dust certification

In addition to ATEX certification permitting installation in explosive gas atmospheres which is described in the main section of this instruction manual, the BA414DF is available with optional ATEX certification permitting use in the presence of combustible dusts. If ATEX dust certification is required it must be requested when the BA414DF Fieldbus Indicator is purchased.

WARNING

Before installing a BA414DF Fieldbus Indicator in the presence of a combustible dust, ensure that the certification information label, which is located on the top of the instrument, specifies dust certification - see section A1.2

A1.1 Zones and Maximum Surface Temperature

The BA414DF has been ATEX certified as Group II, Category 1 GD apparatus $T_{amb} = -20$ to 60°C , with a Maximum Surface Temperature of 100°C . When installed as specified by EN 50281 Part 1-2 'Selection, installation and maintenance of electrical apparatus protected by enclosures', the Fieldbus Indicator may be installed in:

- Zone 20 explosive atmosphere in the form of a cloud of combustible dust in air is continuously present, or for long periods or frequently.
- Zone 21 explosive atmosphere in the form of a cloud of combustible dust in air is likely to occur occasionally in normal operation.
- Zone 22 explosive atmosphere in the form of a cloud of combustible dust in air is not likely to occur in normal operation, but if it does occur, will only persist for a short period.

Be used with dusts having a Minimum Ignition Temperature of:

Dust cloud	150°C
Dust layer on BA414DF up to 5mm thick	175°C
Dust layer on BA414DF over 5mm thick.	Refer to EN500281 part 1-2

At an ambient temperature between -20 and $+60^{\circ}\text{C}$

A1.2 Certification Label Information

The certification label is fitted in a recess on the top outer surface of the enclosure. It shows details of the ATEX dust certification including the maximum surface temperature and ingress protection; a statement that the instrument is a FISCO Field Device, plus BEKA associates name and location. IECEx dust approval information is also shown, non-European certification information may also be included.

BA414DF Fieldbus Indicator	
CE 0359 Ex II 1 GD	T 100°C T $amb = -20^{\circ}\text{C}$ to $+60^{\circ}\text{C}$ IP66 EEx ia IIC T4 ITS06ATEX25313
	FISCO Field Device EEx ia IIC T4
Ex ia IIC T4 DIPA21 TA 100°C IP66 Ta = -20°C to $+60^{\circ}\text{C}$ IECEx ITS 06.0012	
Year of manufacture shown within terminal compartment	
BEKA associates Hitchin England www.beka.co.uk	

ATEX
FISCO
IECEx

The instrument serial number and date of manufacture are recorded on a separate label inside the terminal compartment.

A1.3 Installation & maintenance

The ATEX dust certification relies on the Fieldbus Indicator enclosure being dust-tight. Therefore the terminal cover should only be removed when dust can not enter the instrument enclosure. Before replacing the terminal cover ensure that the sealing gaskets are undamaged and are free from foreign bodies.

APPENDIX 2

FM Approval for use in the USA and CFM Approval for use in Canada

A2.0 Factory Mutual Approval

For installations in the USA and Canada, a version of the BA414DF is available with FM and CFM intrinsic safety and nonincendive approval, project identifications 3027031 and 3027031C. Copies of the Certificates of Compliance are available from BEKA associates sales office and www.beka.co.uk

The FM and CFM Approved version is identical to the ATEX version except the three M20 x 1,5 tapped cable entries are replaced by three plain unthreaded 22.25mm diameter entries. Approved hubs and glands are listed in note 6 of Intrinsically Safe Control Drawing CI410-12 and note 5 of Nonincendive Control Drawing CI410-13. The certification label on the FM and CFM Approved version includes ATEX gas certification information so that the Fieldbus Indicator may be used in systems covered by either authority.

A2.1 Intrinsic safety approval

The BA414DF is approved to FM Class 3610 intrinsic safety standard for use in indoor and outdoor hazardous (classified) locations. Installations must comply with BEKA associates Control Drawing CI410-12, which is attached to this Appendix, ANSI/ISA RP12.06.01 'Installation of Intrinsically Safe Systems for Hazardous (Classified) Locations' and with the National Electrical Code ANSI/NFPA70.

Canadian installations must comply with the Canadian Electrical Code C22.2 and with BEKA associates Control Drawing CI410-12, which is attached to this Appendix.

The BA414DF has a T4 rating at ambient temperatures up to +70°C and may be used with the following gases and dusts:

Intrinsic Safety	
Division 1 or 2	
Class I	Group A & B Group C Group D
Class II	Group E, F & G
Class III	
Zone 0, 1 or 2	
Class 1	Group IIC Group IIB Group IIA

The FM and CFM entity parameters are identical to the ATEX parameters and, like the ATEX certification, confirm that the BA414DF complies with the FISCO Field Device requirements specified in IEC60079-27. The intrinsically safe system shown in Fig 1 of this manual may therefore be used for installations in the USA and Canada, providing the fieldbus power supply, terminators, Zener barriers and galvanic isolators are FM Approved for US installations and CFM or CSA Approved for Canadian installations. All installations must comply with BEKA associates Control Drawing CI410-12.

FM and CFM Approvals also allows the BA414DF to be connected to non-FISCO systems using the entity concept – see section 3.2 of this manual.

A2.2 Nonincendive approval


The BA414DF is FM Class 3611 nonincendive approved allowing it to be installed in Division 2 indoor and outdoor hazardous (classified) locations without the need for Zener barriers or galvanic isolators. US installations must comply with the BEKA associates Control Drawing CI410-13, which is attached to this Appendix, and with the National Electrical Code ANSI/NFPA70.

Canadian nonincendive installations must comply with the Canadian Electrical Code C22.2 and with BEKA associates Control Drawing CI410-13, which is attached to this Appendix.

The FM and CFM Nonincendive Approvals also allow the BA414DF fieldbus indicator to be connected to any appropriately certified FNICO compliant fieldbus segment.

The BA414DF has a T4 rating at ambient temperatures up to +70°C and may be used with the following gases and dusts:

Nonincendive	
Division 2	
Class I	Group A & B Group C Group D
Class II	Groups E, F & G
Class III	
Zone 2	
Class I	Group IIC Group IIB Group IIA

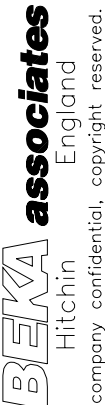Iss.		Date		Modification		Ckd.		Appd.		
										
Date	28.03 2006	Title	FM Approvals Control Drawing for Intrinsically Safe BA414DF & BA418CF Fieldbus Indicators				Drawn	RC	Checked	
Date	28.03 2006	Title					Scale	NTS	Drawing No.	CI410-12
Iss.	1	Date	28.03 2006	Modification	First release	Ckd.		Appd.		

5. To maintain IP66 protection between the BA418CF and the mounting panel:
 - Four panel mounting clips should be used
 - Minimum panel thickness should be 2mm (0.08inches) Steel
 3mm (0.12inches) Aluminium
 - Outside panel finish should be smooth, free from particle inclusions, runs or build-up around cut-out.
 - Panel cut-out should be 66.2 x 136.0mm -0.0 +0.5
 (2.60 x 5.35 inches -0.00 +0.02)
 - Edges of panel cut-out should be deburred and clean
 - Each panel mounting clip should be tightened to between: 20 and 22cNm (1.77 to 1.95 inLb)

6. When installed in a hazardous (classified) location the BA414DF Fieldbus Indicators shall be fitted with cable glands / conduit hubs selected from the following table
Metallic glands and hubs must be grounded – see note 7.

Class	Permitted gland or conduit hub
Class I	Any metallic or plastic cable gland or conduit hub that provides the required environmental protection.
Class II and III	Crouse – Hinds Myler hubs SSTG-1 STG-1 STAG-1 MHUB-1 O-Z / Gedrey Hubs CHMG-50DT REMKE hub WH-1-G Killark Glands CMCXAA050 MCR050 MCX050


7. In addition to the supplied bonding plate, when 3 metallic glands or conduit hubs are fitted to a BA414DF Fieldbus Indicators, all metallic glands or conduit hubs must be connected together and grounded.


8. **CAUTION:** The BA414DF and BA418CF Fieldbus Indicator enclosures are manufactured from conductive plastic per Article 250 of the National Electrical Code the enclosures shall be grounded using the 'E' terminal on the terminal block.

9. The terminator on the Fieldbus must be FM or for Canadian installations CFM or CSA Approved.


10. The BA414DF and BA418CF should be mounted where they are shielded from direct sunlight.

cont:

Appd.		Ckd.		Modification		Date		Iss.		 <p>BEKA associates Hitchin England company confidential, copyright reserved.</p>	<p>FISCO Rules</p> <p>The FISCO Concept allows the interconnection of intrinsically safe apparatus to associated apparatus not specifically examined in such combination. The criterion for such interconnection is that the voltage (Vmax), the current (Imax) and the power (Pmax) which intrinsically safe apparatus can receive and remain intrinsically safe, considering faults, must be equal or greater than the voltage (Uo, Voc or Vt), the current (Io, Isc or It) and the power (Po) which can be provided by the associated apparatus (supply unit). In addition the maximum unprotected residual capacitance (Ci) and inductance (Li) of each apparatus (other than terminators) connected to the Fieldbus must be less than or equal to 5nF and 10uH respectively.</p> <p>In each I.S. Fieldbus segment only one active source, normally the associated apparatus, is allowed to provide the necessary power for the Fieldbus system. The allowed voltage (Uo, Voc or Vt) of the associated apparatus used to supply the bus cable must be limited to the range 14Vdc to 24Vdc. All other equipment connected to the bus cable has to be passive, meaning that the apparatus is not allowed to provide energy to the system, except a leakage current of 50µA for each connected device. Separately powered equipment needs galvanic isolation to ensure the intrinsically safety Fieldbus circuit remains passive.</p> <p>The cable used to interconnect the devices needs to comply with the following parameters: Loop resistance R': 15....150Ω/km Inductance per unit length L':0.4....1mH/km</p> <p>Capacitance per unit length C': 80....200nF/km C' = C' line/line+0.5 C' line/screen, if both lines are floating or C' = C' line/line + C'line/screen, if the screen is connected to one line.</p> <p>Length of spur cable: max. 30m Length of trunk cable: max. 1km Length of splice: max = 1m</p> <p>Terminators At the end of each trunk cable an FM Approved line terminator with the following parameters is suitable: R= 90....100Ω C = 02.2µF</p>
Appd.		Ckd.		Modification	First release	Date	28.03 2006	Iss.	1		<p>System evaluation</p> <p>The number of passive devices like transmitters, actuators, connected to a single bus segment is not limited due to I.S. reasons. Furthermore, if the above rules are respected, the inductance and the capacitance of the cable need not be considered and will not impair the intrinsic safety of the installation.</p> <p>Notes.</p> <p>1. The intrinsic safety FISCO concept allows the interconnection of FM Approved Intrinsically Safe devices with FISCO parameters not specifically examined in combination as a system when: Uo or Voc or Vt ≤ Vmax, Io, Isc or It ≤ Imax, Po ≤ Pi.</p> <p>For Canadian installations the intrinsic safety FISCO concept allows the interconnection of CFM or CSA Approved Intrinsically Safe devices with FISCO parameters not specifically examined in combination as a system when: Uo or Voc or Vt ≤ Vmax, Io, Isc or It ≤ Imax, Po ≤ Pi.</p>
Date	28.03 2006	Iss.	1	Title	FM Approvals Control Drawing for Intrinsically Safe BA414DF & BA418CF Fieldbus Indicators	Drawn	RC	Checked		Scale	NTS
Drawing No.	Sheet		3		Drawing No. CI410-12 Sheet 3	File: CI410-12s3.dwg 25.10.06					

Iss.		Date		Modification		Ckd.		Appd.							
1		28.03 2006		First release		.		.							
															
<p>5. When installed in a hazardous (classified) location the BA414DF Fieldbus Indicator shall be fitted with cable glands / conduit hubs selected from the following table.</p> <p>Metallic glands and hubs must be grounded – see note 6.</p> <table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Class</th> <th style="text-align: center;">Permitted gland or conduit hub</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Class I</td> <td>Any metallic or plastic cable gland or conduit hub that provides the required environmental protection.</td> </tr> <tr> <td style="text-align: center;">Class II and III</td> <td> <p>Crouse – Hinds Myler hubs SSTG-1 STG-1 STAG-1 MHUB-1</p> <p>O-Z / Gedrey hub CHMG-50DT</p> <p>REMKE hub WH-1-G</p> <p>Killark Glands CMCXA050 MCR050 MCX050</p> </td> </tr> </tbody> </table> <p>6. In addition to the supplied bonding plate, when 3 metallic glands or conduit hubs are fitted to BA414DF Fieldbus Indicators, all metallic glands or conduit hubs must be connected together and grounded.</p> <p>7. CAUTION: The BA414DF and BA418CF Fieldbus Indicator enclosures are manufactured from conductive plastic per Article 250 of the National Electrical Code the enclosures shall be grounded using the 'E' terminal on the terminal block.</p> <p>8. The terminator on the Fieldbus must be FM Approved or for Canadian Installations CFM or CSA Approved</p> <p>9. The BA414DF and the BA418CF should be mounted where they are shielded from direct sunlight.</p>										Class	Permitted gland or conduit hub	Class I	Any metallic or plastic cable gland or conduit hub that provides the required environmental protection.	Class II and III	<p>Crouse – Hinds Myler hubs SSTG-1 STG-1 STAG-1 MHUB-1</p> <p>O-Z / Gedrey hub CHMG-50DT</p> <p>REMKE hub WH-1-G</p> <p>Killark Glands CMCXA050 MCR050 MCX050</p>
Class	Permitted gland or conduit hub														
Class I	Any metallic or plastic cable gland or conduit hub that provides the required environmental protection.														
Class II and III	<p>Crouse – Hinds Myler hubs SSTG-1 STG-1 STAG-1 MHUB-1</p> <p>O-Z / Gedrey hub CHMG-50DT</p> <p>REMKE hub WH-1-G</p> <p>Killark Glands CMCXA050 MCR050 MCX050</p>														
Title						Drawn		Checked		Scale					
FM Approvals Control Drawing for Nonincendive BA414DF & BA418CF Fieldbus Indicators						RC		NTS		NTS					
Drawing No.						C1410-13									
Sheet 3															

Cont.

Iss.	1	Date	28.03 2006	Modification	First release	Ckd.		Appd.	
Iss.		Date		Modification		Ckd.		Appd.	
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: center;">  <p>BEMA Hitchin</p> </div> <div style="text-align: center;"> <p>associates England</p> </div> <div style="font-size: small;"> <p>company confidential, copyright reserved.</p> </div> </div> <p style="margin-top: 20px;">FNICO Rules</p> <p>The FNICO Concept allows the interconnection of intrinsically safe apparatus to associated apparatus not specifically examined in such combination. The criterion for such interconnection is that the voltage (Vmax), the current (Imax) and the power (Pmax) which intrinsically safe apparatus can receive and remain intrinsically safe, considering faults, must be equal or greater than the voltage (Uo, Voc or Vt), the current (Io, Isc or It) and the power (Po) which can be provided by the associated apparatus (supply unit). In addition the maximum unprotected residual capacitance (Ci) and inductance (Li) of each apparatus (other than terminators) connected to the Fieldbus must be less than or equal to 5nF and 20uH respectively.</p> <p>In each I.S. Fieldbus segment only one active source, normally the associated apparatus, is allowed to provide the necessary power for the Fieldbus system. The allowed voltage (Uo, Voc or Vt) of the associated apparatus used to supply the bus cable must be limited to the range 14Vdc to 17.5Vdc. All other equipment connected to the bus cable has to be passive, meaning that the apparatus is not allowed to provide energy to the system, except a leakage current of 50µA for each connected device. Separately powered equipment needs galvanic isolation to ensure the intrinsically safety Fieldbus circuit remains passive.</p> <p>The cable used to interconnect the devices needs to comply with the following parameters: Loop resistance R': 15....150Ω/km Inductance per unit length L':0.4....1mH/km Capacitance per unit length C': 80....200nF/km C' = C' line/line+0.5 C' line/screen, if both lines are floating or C' = C' line/line + C'line/screen, if the screen is connected to one line. Length of spur cable: max. 30m Length of trunk cable: max. 1km Length of splice: max = 1m Terminators At the end of each trunk cable an FM Approved line terminator with the following parameters is suitable: R= 90...100Ω C = 0....2.2µF</p> <p>System evaluation The number of passive devices like transmitters, actuators, connected to a single bus segment is not limited due to nonincendive reasons. Furthermore, if the above rules are respected, the inductance and the capacitance of the cable need not be considered and will not impair the intrinsic safety of the installation.</p> <p>Notes. 1. The FNICO concept allows the interconnection of FM Approved nonincendive devices with FNICO parameters not specifically examined in combination as a system when: Uo or Voc or Vt ≤ Vmax.</p> <p style="margin-left: 40px;">For Canadian installations the FNICO concept allows the interconnection of CFM or CSA Approved nonincendive devices with FNICO parameters not specifically examined in combination as a system when: Uo or Voc or Vt ≤ Vmax.</p>									
Iss.		Date		Modification		Ckd.		Appd.	
<p>Title</p> <p style="color: red;">FM Approvals Control Drawing for Nonincendive BA414DF & BA418CF Fieldbus Indicators</p>						Drawn RC	Checked	Scale NTS	
						Drawing No. Sheet 4	CI410-13		

APPENDIX 3 IECEX Certification

A3.0 The IECEx Certification Scheme

IECEX is a global certification scheme for explosion protected products which aims to harmonise international certification standards.

For additional information about the IECEx certification scheme and to view the BEKA associate certificates, please visit www.iecex.com

A3.1 IECEx Certificate of Conformity

For use in an explosive gas atmospheres

The BA414DF Fieldbus Indicator has been issued with an IECEx Certificate of Conformity number IECEx ITS 06.0012 which specifies the following certification codes and marking:

Ex ia IIC T4
Ta = -40°C to 70°C

When connected to a certified IECEx system the BA414DF may be installed in:

- Zone 0 explosive gas air mixture continuously present.
- Zone 1 explosive gas air mixture likely to occur in normal operation.
- Zone 2 explosive gas air mixture not likely to occur, and if it does will only exist for a short time.

Be used with gases in groups:

- Group A propane
- Group B ethylene
- Group C hydrogen

Having a temperature classification of:

- T1 450°C
- T2 300°C
- T3 200°C
- T4 135°C

At an ambient temperature between -40 and +70°C.

A3.1.1 Installation

In an explosive gas atmosphere

For installations in gas atmospheres the BA414DF IECEx and ATEX certifications have identical intrinsic safety parameters and installation requirements. The ATEX system design requirements described in section 3 of this manual may therefore be used for IECEx installations in gas atmospheres, but the local code of practice should also be consulted.

A3.2 IECEx Certificate of Conformity

Use in presence of combustible dusts

In addition to IECEx certification permitting installation in explosive gas atmospheres, the BA414DF is available with optional IECEx certification permitting use in the presence of combustible dusts.



The IECEx Certificate of Conformity specifies the following certification codes and marking:

Ex ia IIC T4
DIP A21 TA 100°C IP66
Ta = -20°C to 60°C

If IECEx dust certification is required it must be requested when the BA414DF Fieldbus Indicator is purchased.

WARNING

Before installing a BA414DF Fieldbus Indicator in the presence of a combustible dust, ensure that the certification information label, which is located on the top of the instrument, specifies dust certification - see below.

BA414DF Fieldbus Indicator	
 0359  II 1 GD T100°C Tamb = -20°C to +60°C IP66 EEx ia IIC T4 ITS06ATEX25313	ATEX
FISCO Field Device EEx ia IIC T4	FISCO
Ex ia IIC T4 DIP A21 TA 100°C IP66 Ta = -20°C to +60°C IECEx ITS 06.0012	IECEX
Year of manufacture shown within terminal compartment	
BEKA associates Hitchin England www.beka.co.uk	

When connected to a certified IECEx system the BA414DF may be installed in:

- Zone 20 explosive atmosphere in the form of a cloud of combustible dust in air is continuously present, or for long periods or frequently.
- Zone 21 explosive atmosphere in the form of a cloud of combustible dust in air is likely to occur occasionally in normal operation.
- Zone 22 explosive atmosphere in the form of a cloud of combustible dust in air is not likely to occur in normal operation, but if it does occur, will only persist for a short period.

3.2.1 Installation

In presence of combustible dusts

The IEC dust standard has not yet been published (Nov. 2006) so the local code of practice should be consulted to determine the allowable dust Minimum Ignition Temperature. For reference, CENELEC standards allow the BA414DF to be used in the presence of dusts having the following Minimum Ignition Temperatures:

Dust cloud	150°C
Dust layer on BA414DF up to 5mm thick	175°C
Dust layer on BA414DF over 5mm thick.	Refer to EN500281 part 1-2

The allowable ambient temperature range of the BA414DF in a combustible gas is -20 to +60°C.

The IECEx safety parameters are identical to the ATEX parameters and, like the ATEX certification, confirm that the BA414DF complies with the FISCO Field Device requirements specified in IEC60079-27.

The IECEx certificate may be downloaded from www.beka.co.uk, www.iecex.com or requested from the BEKA sales office.

A3.3 Versions of the BA414DF

All versions of the BA414DF Fieldbus Indicator have IECEx certification. This includes:

ATEX version for use in gas atmospheres.

IECEx code Ex ia IIC T4
Ta = -40°C to 70°C

ATEX version for use in gas and dust atmospheres.

IECEx code Ex ia IIC T4
DIP A21 TA 100°C IP66
Ta = -20°C to 60°C

Factory Mutual Approved version

IECEx code Ex ia IIC T4
Ta = -40°C to 70°C

Modifications

Issue 1: 17th Nov 06
First issue

Issue 2: 8th December 06
Details of FM & CFM Approval added.
See CRN 0966